

**FIGURE 3-8 REMOTE SWITCH OUTLINE DIMENSIONS**

Use only the ARTEX approved antennas. The ELT will not operate properly without being connected to the antenna for which it was designed.

FAA Advisory Circular 43.13-2A, Chapter 3, paragraphs 36 through 38 provides additional guidance for antenna installations.

3.3. Installing the Mounting Tray

Refer to figures 3-2 & 3-3

Before installing the tray, be sure the mounting location meets the requirements established in ELT Mounting Locations.

NOTE: Although the Top Cover also has 4 holes, do not use for mounting the ELT.

Mark the 4 holes needed for the tray using the tray as a guide. Be sure the arrow, on the tray, aligns within 10 degrees of the longitudinal axis of the aircraft (and in direction of flight).