

MODEL TFM-30

Airborne VHF FM Transceiver



Technisonic VHF FM Airborne Transceiver

The Technisonic TFM-30 airborne VHF/FM transceiver utilizes state of the art frequency synthesis techniques to provide FM communications on every currently available channel in the Public Safety, Forestry and General Service VHF/FM Low Band. This transceiver provides coverage from 30.000 MHz to 50.000 MHz in 2.5 KHz increments and is capable of operation in both 12.5 KHz (Narrow Band) and 25 KHz (wide Band) mode. Data entry and function control are via a front panel 12 button keypad. Operating frequency and other related data are presented on a 48 character two line LED matrix display which is available in either green or red (green standard, red optional).

Technisonic FM transceivers can be operated in the Direct Entry or Simplex mode by simply keying in the desired operating frequency, or can function without restriction on any split frequency pair within the band. The TFM-30 features 120 preset memory positions each of which is capable of storing a receive frequency, a transmit frequency, a separate CTCSS tone and/or DPL / DCS (Digitally coded Squelch) code for each receive and transmit frequency and an alpha numeric identifier for each channel. The TFM-30 allows either 25 kHz wide band or 12.5 kHz narrow band operation on any or all of 120 preset channels. Data can be easily entered into any of the preset non-volatile memory positions for both main and guard channels via the front panel keyboard, or can be downloaded from a PC or uploaded to a PC from a transceiver using software supplied with each radio. Information stored in memory is available for instant recall by keypad entry, or by pressing the UP or DOWN button which allows the operator to scroll through all preset channels. Technisonic FM transceivers feature a synthesized two channel guard, receiver, a DTMF encoder for signaling during transmit, and a scan function which will scan any or all of the frequencies stored in the preset memory positions.

The TFM-30 transceiver is panel mounted (Dzus) and completely self contained in a 8.0 x 3.0 x 5.75 inch chassis weighing just 3.1 pounds. Front panel controls are **MAIN** for main channel volume; **GUARD** for guard channel volume; **MON** for squelch test; a **MN/GD** switch provides for main or guard transmitter selection; a **G1/G2** switch selects guard 1 or guard 2 receive and transmit; and a **HI/LO** switch allows for control of transmitter power output. Hi power is 10 Watts output, low power is 1 Watt output, to comply with Marine harbor environment rules. This transceiver offers 28 volt DC backlighting, which is controlled by the aircraft dimmer bus. Display brightness is controlled from the front panel keypad. The small size and light weight of the TFM-30 transceiver makes this radio ideally suited to helicopter installations. Technisonic FM transceivers are compliant with RTCA DO-160C categories relating to Vibration, Overpressure, Humidity, Temperature and Altitude, Magnetic Effect, Power Input, Voltage Spike, Decompression, and RF emission (including Section 21, Category Z).

TFM-30 General Specifications

| | |
|--|--|
| Frequency range | 30.000 MHz to 50.000 MHz |
| Tuning increments | 2.5 KHz |
| Operating mode | F3E simplex or semi-duplex |
| Channel spacing | 12.5 KHz or 25 KHz |
| Physical dimensions | Approx. 8.0 x 3.0 x 5.75 inches |
| Weight | 3.1 Lbs. (1.4 Kg) |
| Temperature range | -45 deg C to +70 deg C |
| Altitude certification | 50,000 ft. |
| Power requirement | 28 VDC (14VDC with optional converter) Receive - 700 mA 1 Watt transmit - 1.3 amps 10 Watts transmit - 2.0 Amps |
| Certification | FCC and DOC |
| RTCA DO-160C Environmental category compliance | (B2,D1)XXX(B,M,N)XXXXXXABBXXXZXXX |
| Guard receiver | 2 channel, synthesized |
| CTCSS squelch encoder/decoder | all available CTCSS tones |
| DPL/DCS squelch encoder/decoder | all available codes, 000 to 777 |
| Audio output | 500 mw into 600 ohms |
| Speaker output | 2.5 Watts RMS into 4 ohms |
| Back lighting | 28 VDC or 5 VAC (specify when ordering)) |
| Display color | Green (standard) or Red (specify) |

Minimum Performance Specifications

Main receiver

| | |
|-----------------------------|--|
| Sensitivity | Better than 0.35 microvolts at 12 dB SINAD |
| Adjacent channel | -70 dB (25 KHz) |
| Spurious attenuation | -80 dB |
| Third order intermod | -70 dB |
| Image attenuation | -80 dB |
| FM acceptance | ± 6 KHz |
| Hum and noise | better than 40 dB |
| Audio distortion | Less than 5% |
| Antenna conducted emissions | less than -80 dBm |

Guard receiver

All specifications as per main receiver

Transmitter

| | |
|----------------------|---|
| Power output | 1 Watt or 10 Watts, front panel selectable |
| Output impedance | 50 ohms |
| Maximum deviation | Limited to ± 5 KHz (wide band mode) or 2.5 KHz (narrow band mode). |
| Spurious attenuation | -80 dB below carrier |
| Frequency stability | $\pm 0.0025\%$ |
| Microphone circuit | Carbon or equivalent |
| Sidetone output | 500 mW (max) into 600 ohms |
| Harmonic attenuation | -60 dB below carrier level |
| FM Hum and Noise | -40 dB |
| Audio input | 50 mV at 2.5 KHz into 200 ohms for 3.5 KHz deviation, adjustable |
| Audio distortion | Less than 5% |

Note: Specifications are subject to change without notice
DPL is a trademark of Motorola Corporation

Technisonic Industries Ltd.

240 Traders Blvd, Mississauga, Ontario L4Z 1W7 Canada
Ph: 905 890-2113 Fax: 905 890-5338 www.til.ca



TFM-30

VHF/FM AIRBORNE TRANSCEIVER



Installation and Operating Instructions

TiL Document No. 98RE244
Rev. n/c Issue 9

MARCH 2007

Technisonic Industries Limited

240 Traders Boulevard, Mississauga, Ontario L4Z 1W7
Tel: (905) 890-2113 Fax: (905) 890-5338
www.til.ca

| REVISION HISTORY [98RE244] | | | | |
|--|---------------------|---|----------|--------------|
| REV | SECTION - PAGE - | DESCRIPTION | DATE | Edited by |
| N/C issue 5 | | 98RE244 | | |
| Chg to Issue 6 | Overall | File formatting may cause pages to be re-sequenced by adding headers, footers, etc. Correct typing errors as found. Issue updated as a result. | JUN 2008 | FM |
| Chg to Issue 7 | 3-6 | Figure 3-2 updated | DEC 2008 | FM |
| Issue 8 | 3-6 | Figure 3-2 split for easier legibility Section 3-6 onwards pages re-sequenced as result | | |
| | | NOTE: New document template Document layout/format (see A790 TiL 09RE410 Install) - New Title page includes Logo, product photo - Revision History Approval column deleted - Frontal matter, Contents and footer updated - Warranty added to back cover page - All other data remains unchanged | OCT 2009 | FM |
| Issue 9 | 3-3 3-12 A-4 | Correct typos MHZ to MHz in Table 3.2 Para. 3.13 1. ... Mhz to MHz Para C. 17db to 17 dB | | |
| | 3-1 A-2 A-4 | Para. 3.5 Removed first sentence. Freq changed from 39.3855 MHZ to 39.3850 MHz Freq changed from 36.0333 to 36.0325 Freq changed from 36.0333 to 36.0325 | | |
| | iii | Revision History page: added <i>edited by</i> column In "Notice:" Removed "As of June 18, 2002" | MAR 2010 | FM |

INFORMATION NOTES

ESD CAUTION



This unit contains static sensitive devices. Wear a grounded wrist strap and/or conductive gloves when handling printed circuit boards.

FCC COMPLIANCE INFORMATION

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his/her own expense.

WARNING AND DISCLAIMER

Changes or modifications not expressly approved by Technisonic Industries could void the user's authority to operate the equipment.

This manual is designed to provide information about the TFM-30. Every effort has been made to make this manual as complete and accurate as possible.

WARRANTY INFORMATION

The Model TFM-30, VHF/FM Transceiver is under warranty for one year from date of purchase. Failed units caused by defective parts, or workmanship should be returned to:

Technisonic Industries Limited
240 Traders Boulevard
Mississauga, Ontario L4Z 1W7

Tel: (905) 890-2113
Fax: (905) 890-5338

NOTICE: The above stated address supersedes all others that may appear otherwise in this manual.

CERTIFICATION SUMMARY

Summary of DO-160C Environmental Testing for Technisonic Model TFM-30, VHF/FM Transceiver:

| Conditions | Section | Description of Conducted Tests |
|--------------------------|----------------|--|
| Temperature and Altitude | 4.0 | Equipment tested to categories B2 and D1. |
| Vibration | 8.0 | Equipment is tested without shock mounts to categories B, M and N. |
| Magnetic Effect | 15.0 | Equipment is class A. |
| Power Input | 16.0 | Equipment tested to category B. |
| Voltage Spike | 17.0 | Equipment tested to category B. |
| RF Emission | 21.0 | Equipment tested to category Z. |

INSTALLATION APPROVAL NOTE

Presently, no TSO standard exists for airborne FM transceivers. To make it easier for installation agencies to provide their customers with an approved installation supported by an effective Airworthiness Approval, Technisonic has secured Supplemental Type Certificate (STC) Approvals (both US and Canadian) on its Airborne FM products for many helicopters currently being delivered in the US and Canada as well as a number of single engine fixed wing aircraft. The above referenced DO-160C test data is also on file and available from Technisonic to support approval requirements in airframes for which Technisonic does not possess an STC.

Approved aircraft types are listed in the attachments to the formal STC documents. These STCs are the exclusive property of Technisonic and require the written authority of Technisonic for their use. To assist Factory Authorized Technisonic Dealers in the certification process, we have placed copies of our Canadian and US STCs on our web site along with a letter of authorization for their use. These documents may be downloaded and used as support for the technical submission to FAA or Transport Canada. Only authorized factory dealers/installers are permitted to download and make use of these documents on behalf of their customers (end users) in support of regulatory agency approval. Please refer to the Technisonic web site www.til.ca for the latest issue of available STCs and letter of authorization for use.

TABLE OF CONTENTS

| SECTION | TITLE | PAGE |
|--|---|------|
| SECTION 1 GENERAL DESCRIPTION | | |
| 1.1 | Introduction | 1-1 |
| 1.2 | Description | 1-1 |
| 1.3 | Purpose of Equipment | 1-1 |
| 1.4 | Model Variation | 1-1 |
| 1.5 | Technical Characteristics | 1-2 |
| SECTION 2 OPERATING INSTRUCTIONS | | |
| 2.1 | Operating Features | 2-1 |
| 2.2 | Operating Instructions | 2-3 |
| 2.3 | Programming Instructions | 2-4 |
| 2.4 | Scanning Function | 2-5 |
| 2.5 | Priority and Selective Memory Channel Scanning and Scan Lists | 2-5 |
| 2.6 | Direct Frequency Entry Mode | 2-5 |
| 2.7 | Receive Frequency Simplex Function | 2-6 |
| 2.8 | Keyboard Lockout Function | 2-6 |
| 2.9 | Variable Frequency Mode Function | 2-6 |
| 2.10 | LED Display Variable Dimming Mode | 2-6 |
| 2.11 | 90 Second Transmitter Timeout Feature | 2-6 |
| 2.12 | Quick Guard Programming Feature | 2-6 |
| 2.13 | Programming CTCSS Tone | 2-7 |
| 2.14 | PC Memory/Programming Download Capability | 2-7 |
| SECTION 3 INSTALLATION INSTRUCTIONS | | |
| 3.1 | General | 3-1 |
| 3.2 | Equipment Packing Log | 3-1 |
| 3.3 | Transceiver Installation | 3-1 |
| 3.4 | Installation Kit - Contents | 3-1 |
| 3.5 | Antenna Installation | 3-1 |
| 3.6 | Installation - Pin Locations and Connections | 3-1 |
| 3.7 | Wiring Instructions – 15-Pin D-Connector | 3-4 |
| 3.8 | Wiring Instructions – 9-Pin D-Connector | 3-5 |
| 3.9 | Internal Programming and Guard Enable/Disable Jumper | 3-9 |
| 3.10 | Transmitter Power Adjustments | 3-10 |
| 3.11 | Transmitter Microphone Level Adjustment | 3-10 |
| 3.12 | Transmitter Sidetone Level Adjustment | 3-10 |
| 3.13 | Main and Guard Squelch Adjustment | 3-12 |
| 3.14 | Transmitter Deviation Adjustment | 3-12 |
| 3.15 | Guard Receiver Audio Limit Feature | 3-12 |
| APPENDIX A | | |
| | Post Installation EMI Tests | A-1 |

LIST OF FIGURES

| FIGURE | TITLE | PAGE |
|--------|---|------|
| 2.1 | Operator's Switches and Controls - TFM-30 | 2-2 |
| 2.2 | TFM-30 Transceiver - PC Up/Download Cable - Wiring Diagram | 2-10 |
| 3 | Transceiver mounted view of 15- and 9-pin connectors. | 3-1 |
| 3.1 | Outline Drawing for TFM-30 Transceiver | 3-2 |
| 3.2a | Wiring Connections for TFM-30 Transceiver | 3-6 |
| 3.2b | Wiring Connections for TFM-30 Transceiver | 3-7 |
| 3.3 | Low Pass Filter Outline Drawing and Installation Details | 3-8 |
| 3.4 | Internal Enable/Disable Jumper and TX High/Low Power Adjust Locations..... | 3-9 |
| 3.5 | Microphone and Sidetone Level, Main and Guard Squelch Adjustment Access | 3-11 |
| 3.6 | Deviation Adjustment Potentiometer Location | 3-13 |

LIST OF TABLES

| TABLE | TITLE | PAGE |
|-------|---|------|
| 2.1 | Available CTCSS tones | 2-7 |
| 2.1 | Usable and unique octal 3-digit DPL/DCS | 2-8 |
| 3.1 | 15-Pin D-Connections | 3-3 |
| 3.2 | 9-Pin D-Connections | 3-3 |
| 3.3 | ATU Band Select Truth Table | 3-5 |

SECTION 1 - GENERAL DESCRIPTION

1.1 INTRODUCTION

This publication provides operating and installation information on the TFM-30 transceiver manufactured by Technisonic Industries Limited. Standard factory software installed in the TFM-30s is L(x). The unit offers an extended frequency range with selectable channel spacing and is intended for use only by government agencies or contractors thereto, who have obtained licensing for operation in the 30-50 MHz band.

1.2 DESCRIPTION

The TFM-30 transceiver is a frequency agile, fully synthesized airborne transceiver capable of operating in the 30.000 MHz to 50.000 MHz frequency range in 2.5 kHz increments with either 25 kHz, 20 kHz or 12.5 kHz channel spacing. The Transceiver can operate without restriction on any split frequency pair in the band and also incorporates a two channel synthesized guard receiver.

The TFM-30 Transceiver provides 120 operator accessible memory positions, each of which is capable of storing a transmit frequency, receive frequency, transmit frequency CTCSS tone or DPL code, receive frequency CTCSS tone or DPL code, an alphanumeric identifier for each channel and wideband (25, 20 kHz) or narrowband (12.5 kHz) channel spacing assignment.

Operating frequency and other related data are presented on a 48-character, two-line LED matrix display. Data entry and function control are performed via a 12-button keypad. Preset channels may also be scrolled and scanned through keypad function activation. Data may also be entered via a PC computer with the provided software and optional PIB-100 programming interface box or via an older computer and PC Up/download cable, P/N 943165-4

1.3 PURPOSE OF EQUIPMENT

The TFM-30 VHF/FM Transceiver is designed to provide secondary airborne communications to facilitate operations which are typically performed in a low altitude environment. The transmitter section of this unit has a minimum of 8 watts and does not exceed 10 watts output power which may be reduced by a front panel switch to 1 watt in order to reduce interference to land based systems.

1.4 MODEL VARIATION

There are four variations of the Model TFM-30 Transceiver. All units offer identical features and performance except for the following differences:

| | |
|---------------------------|---|
| TFM-30, P/N 961082-1 | GREEN display and 28 volts back lighting. |
| TFM-30, P/N 961082-1 (5V) | GREEN display and 5 volts back lighting. |
| TFM-30, P/N 961082-2 | RED display and 28-volts back lighting. |
| TFM-30, P/N 961082-2 (5V) | RED display and 5-volts back lighting. |

Both P/N's 961082-1 and 961082-2 are always provided with 28 Volt back lighting unless a specific request is made for 5 Volt AC operation.

1.5 TECHNICAL CHARACTERISTICS

| <u>Specification</u> | <u>Characteristic</u> |
|---|--|
| GENERAL | |
| Model Designation: | TFM-30 |
| Frequency Range: | 30.000 to 50.000 MHz |
| Tuning Increments: | 2.5 kHz |
| Operating Mode: | F3E simplex or semi-duplex |
| Channel Spacing: | 25 or 12.5 KHz |
| Physical Dimensions: | Approx. (L) 8.0" x (W) 5.75" x (H) 3.0" |
| Weight: | Approx. 3.1 Lbs (1.4 Kg) |
| Mounting: | Panel Mount via Dzus fasteners |
| Operating Temperature Range: | -40° C to +70° C |
| Power Requirement: | 28.0 VDC \pm 15% |
| Voltage: | Receive - 0.7 A Max. |
| Current: | 1-Watt Transmit - 1.5 A Max. 8-10 Watt Transmit - 2.5 A Max. |
| Frequency Selection: | 120 memories programmed with: a) Tx Frequency/Rx Frequency b) Tx/Rx CTCSS tone or DPL ¹ code c) 9-character alphanumeric title |
| Guard Receiver: | 2 channels programmed with: a) Tx Frequency/Rx Frequency b) CTCSS tone or DPL ¹ code c) 9-character alphanumeric title |
| CTCSS squelch/encoder: | All CTCSS tones available |
| DPL ¹ digital squelch/encoder: | All standard DPL codes |
| DTMF encoder: | All standard DTMF tones |
| Audio Outputs: | 0.5 Watts into 600 Ω |
| Speaker Output: | 2.5 Watts min. into 4 Ω |
| Back Lighting: | 28 Volts (standard) or 5 Volts (specify) |
| Display Colour: | Green (standard) or Red (specify) |

DPL¹ is a trademark of Motorola Corporation

1.5 TECHNICAL CHARACTERISTICS (continued)

| <u>Specification</u> | <u>Characteristic</u> |
|---|---|
| MAIN RECEIVER | |
| Sensitivity at 12 dB SINAD | 0.4 μ V nominal |
| Adjacent Channel Selectivity | -70 dB |
| Spurious Attenuation | -90 dB |
| Third Order Intermodulation | -70 dB |
| Image Attenuation | -80 dB |
| FM Acceptance | \pm 6 kHz |
| Hum and Noise | Better than 50 dB |
| Audio Distortion | less than 5% |
| Antenna Conducted Emission | less than -70 dBm |
| GUARD RECEIVER | |
| All specifications identical to main receiver | |
| TRANSMITTER | |
| RF Power Output | 1-Watt or 10-Watts |
| Output Impedance | 50 Ω |
| Maximum Deviation (In narrowband mode) | \pm 5 kHz (25 kHz mode) \pm 2.5 kHz (12.5 kHz mode) |
| Spurious Attenuation | -80 dB below carrier level |
| Frequency Stability | \pm 5 ppm |
| Microphone Circuit | Carbon or equivalent |
| Sidetone Output | 0.5W (max) into 600 Ω |
| Harmonic Attenuation | -60 dB below carrier level |
| FM Hum And Noise | -40 dB |
| Audio Input | 50 mV at 2.5 kHz into 200 Ω input circuit for \pm 3.5 kHz deviation, adjust. |
| Audio Distortion | Less than 5% |

Specifications are nominal and may be subject to change without notice.

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

This page left intentionally blank.

SECTION 2 – OPERATING INSTRUCTIONS

2.1 OPERATING FEATURES

The equipment has several important operating features which provide maximum flexibility, performance and versatility. These features include:

1. 120 memory positions which can each be programmed with a transmit and receive frequency with 25 or 12.5 kHz channel spacing, Tx/Rx CTCSS tones or DPL codes and a 9-character alphanumeric title.
2. Two guard channels which can each be programmed with a Rx frequency with 25, 20 or 12.5 kHz channel spacing, CTCSS Tx tone or DPL code and a 9-character alphanumeric title.
3. Scanning of preprogrammed memories with selective memory scanning, in 5 scan lists.
4. Priority scan of memory channel 1, if desired.
5. Direct frequency entry mode.
6. Receive frequency simplex function.
7. Switchable RF output power between 1 watt and 8-10 watts.
8. Lockout of keyboard to prevent inadvertent entries.
9. Variable frequency mode to manually scan up and down in 2.5 kHz steps.
10. LED display variable dimming mode.
11. Selectable 90 second Tx time out feature.
12. Quick download of any of the 120 memory positions to the guard memories.
13. PC Memory Upload or download capability.
14. Guard jumper (J15) to enable/disable Guard programming.
15. Compatibility with industry standard Antenna Tuner Unit.
16. Configuration Menu to enable/disable various functions as follows:

1. **Configuration Menu** - Pressing **ENTER**, **RCL** and **FUNC** together with all 3 front panel switches in the “up” position while turning the radio on will put it into configuration mode. The programming features that can be configured by this menu include:
 - a. **DPL** – Can be turned on or off with the MUP and MDN (4 and 7) keys. This only removes the DPL entry step from the programming sequence and does not stop memories that already have DPL codes from working. This also applies to the rest of the on/off configurable items.
 - b. **Scan** – Can be disabled. Selecting FUNC and SCAN will do nothing if Scan is off. The scan list indicator (+) will still display if it was previously programmed.
 - c. **Rx CTCSS** – Can be turned on or off from the programming sequence. This affects only the CTCSS tones for receive.
 - d. **FUNC 7** - Can be turned on or off. When off, the main memory channel can not be dumped into one of the guard channels using function 7.
 - e. **LAST MEM** – If set to on, the last memory channel on the display will be what comes up when the radio is turned on. If set to off, the last memory that changes were made to will be what comes up when the unit is switched on.
2. **Guard Jumper** - Programming of the guard channels can be totally disabled by removing J15. This way, the radio has to be disassembled in order to reprogram either of the guard frequencies.

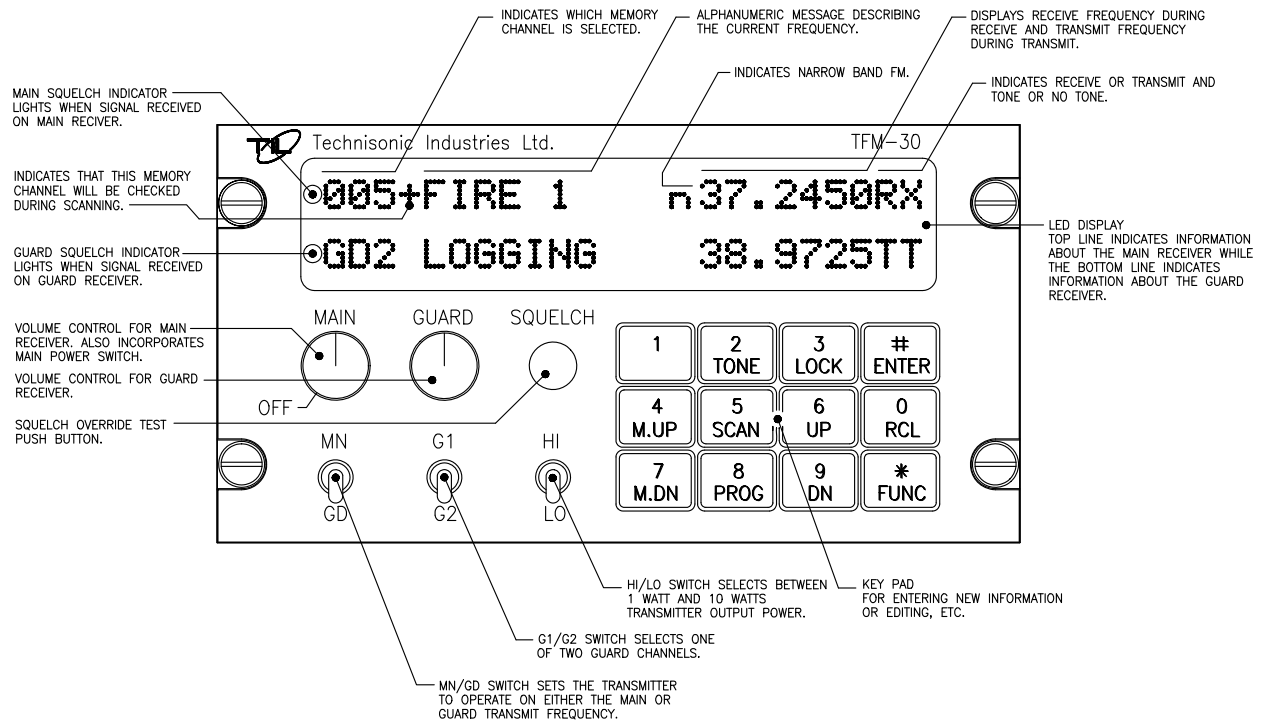


FIGURE 2.1 TFM-30 Operator's Switches and Controls

2.2 OPERATING INSTRUCTIONS (See Figure 2-1)

1. Switch power on by turning the main volume clockwise. Depending how the radio is configured, either the last programmed or last displayed frequency will appear on the screen. The transceiver is now in normal operating mode.
2. Adjust the audio level by adjusting the main and guard volume knobs.
3. Pressing the squelch-defeat button will open both receivers to confirm they work.
4. Read the display. The top line will indicate which memory is selected followed by a "+" if the memory position is included in a scan list, an alphanumeric message, and the frequency of the main receiver. A small "n" before the frequency indicates 12.5 kHz narrowband channel spacing is in effect on this memory position. In the receive mode, the frequency is followed by an "RT" if a RX CTCSS tone or RX DPL code is programmed, or an "RX" if no Receive tone/code is programmed. Similarly, in the transmit mode either a "TT" or "TX" is shown after the frequency. The bottom line indicates similar information about the guard receiver.
5. Only TX CTCSS tones or TX DPL codes may be programmed for the guard receiver. At the beginning of each line, an LED indicates open squelch.
6. Set the MN/GD switch to main or guard transmit frequency.
7. Set the G1/G2 switch to the desired guard channel.
8. Set the HI/LO switch to the desired RF output power.
9. Select the desired memory by using the M.UP and M.DN buttons, or the RCL button and a three digit number followed by ENTER.
10. To transmit DTMF tones, use the keyboard keys while holding the PTT button on the microphone. The keyboard returns to its normal function when the PTT is released.

The display always shows the status of both receivers and the transmitter. The light at the left of the top and bottom line indicates which receiver is receiving. The display also indicates the memory channel in use and the guard channel in use. A "TX" (no TX tone/codes programmed) or "TT" (either TX tone or code programmed) on the right side of the display indicates whether the guard or main channel is active when transmitting. The transmit frequency is also shown. In the receive mode the display shows "RX" beside the receive frequency if no RX tone or DPL code is programmed and "RT" if a CTCSS tone or DPL code is programmed.

When the transceiver is in either of the operating frequency or CTCSS tone/DPL code programming modes and you must respond to a call, click the microphone PTT once (the radio will not transmit during this click). This will cause the transceiver to revert back to the normal operating mode and communications with the caller can proceed in the usual fashion.

The TFM-30 was designed for compatibility with an industry standard Antenna Tuner Unit through the 9-pin connector on the rear panel of the radio. The ATU is enabled during transmit.

2.3 PROGRAMMING INSTRUCTIONS

To program one of the 120 memory channels in the TFM-30:

1. Press the **FUNC** key. The display will show the function prompt.
2. Press the **PROG** key. The display will show the current receive frequency with a flashing cursor on the first digit (The first digit is always a <3>, <4> or <5>).
3. Type in the "desired" receive frequency. If you type in a frequency which is not a 2.5 kHz step, the nearest valid frequency will be automatically selected.
4. The cursor will return to the second digit. You can now retype the frequency if you made an error or press **ENTER** to continue.
5. The transmit frequency will be displayed with the cursor on the second digit. Follow the same method as in step 3 and 4.
6. The channel spacing increment of either 25 or 12.5 KHz is now displayed. Use the **M.UP** and **M.DN** keys to select the desired channel spacing for the memory position, then press **ENTER**.
7. The alphanumeric title is now displayed. Use the **M.UP** and **M.DN** keys to scroll through the alphabet, numbers and symbols. When the desired character is displayed, press **ENTER** to advance to the next character. Press "1" to backspace.
8. Keep repeating step seven until the last space is set. The display will show SCAN or LOCKOUT to enable this memory position as part of a scan list or lock it out of the scan list. Use the **1,2,3,4,5** and **M.DN** keys to toggle between these functions (for details, see paragraph 2.5). Once the desired condition has been selected, press **ENTER**. The TFM-30's display will show a "+" beside the memory channel number if scan is enabled.
9. The display will now show the current memory number. Type in the 3-digit number of the memory you want to save to (if different from displayed one) and press **ENTER**.
10. You now have the option to program the guard frequencies by pressing **FUNC** or press **ENTER** to return to normal operating mode.
11. If you pressed **FUNC** to program the guards, guard "1" transmit frequency will be displayed with the flashing cursor on the second digit. Enter the frequencies for guard "1" receive/transmit and guard "2" receive/transmit as in step 3 and 4.
12. The alphanumeric labels for guard "1" and guard "2" are entered the same as in step 7 and 8. When the last character is entered, the radio returns to normal operating mode. If the guard is to be programmed for 12.5 kHz narrowband operation, use the QUICK GUARD PROGRAMMING FEATURE described in paragraph 2.12. A memory position must be programmed to the 12.5 kHz mode then the contents can be quickly downloaded to GD1 or GD2 memory positions.

Programming of memory is disabled when the internal entry disable jumper is set. Alternatively any transceiver can be programmed by an IBM PC or compatible computer. See section 2.14 **PC Memory Programming Up/Download Capability**.

2.4 PRIORITY SCANNING, SELECTIVE MEMORY CHANNEL SCANNING AND SCAN LISTS

Instead of breaking up the 120 channels into blocks for scanning, the TFM-30 software has 5 scan lists. Any of the 120 channels can be assigned to any one of more of these 5 scan lists. This means the channels do not have to be repeated for them to be in more than one block and that you are not limited to the number of channels that you can scan at once, since all 120 channels can be put into any scan list.

The priority memory channel is always memory position number 1. The priority memory channel is scanned every other step (e.g. 121314151...) to ensure that no incoming messages are missed. The priority channel can be locked out, which will result in the normal scanning of the other memory positions.

Selective memory scanning allows the user to select which of the 120 memory channels are to be scanned or locked out when the scan function is invoked. To use this feature, follow the PROGRAMMING INSTRUCTIONS found in paragraph 2.3. Once the screen displays **SCAN** or **LOCKOUT**, use the **1,2,3,4** or **5** key to add the channel to the corresponding scan list or lists. The **M.DN** key acts as a clear button removing the channel from all scan lists and displaying **LOCKOUT**. Press **ENTER** when you are happy with your selections. In normal operating mode the display will later show a "+" beside the memory channel number if it has been included in any of the 5 scan lists.

2.5 SCANNING FUNCTION (5 second talkback delay)

1. To start scanning of the memory channels, press **FUNC** then **SCAN** and then the number (1,2,3,4,5) of the desired scan list.

The radio will scan through all the preset memory positions in the selected scan list (see above paragraph for priority and selective scan features) and will lock on to the first active channel in the scan sequence. It will remain on the channel until it becomes inactive. Scanning will resume again after five seconds of inactivity. To exit the scan mode, press the **SCAN** key. This will cause the radio to revert back to the normal operating mode.

If while scanning, you hear a call for you:

- Respond to the call within 5 seconds. When scanning is interrupted by an incoming signal, the channel will remain open for five seconds before resuming scanning.
- During communications the five second timer is reset from the last Rx or Tx signal encountered.

The radio resumes scanning once the Rx or Tx activity has ceased for more than five seconds. The **SCAN** key must be pressed to exit the scan mode.

2.6 DIRECT FREQUENCY ENTRY MODE

This mode is designed to facilitate quick frequency selection during emergency and other operational conditions requiring direct operating frequency selection. This operating mode is disabled along with the programming mode when the internal disable jumper is set.

When the transceiver is in the normal operating mode, press **FUNC** and the desired operating frequency (e.g. 39.275).

Please note in the above operation, after **FUNC** and the first digit are entered, the LED display will show memory channel "000" and then the remaining digits in the desired frequency are shown as they are entered. No alphanumeric message can be entered in this mode. Operation on the new frequency occurs in both transmit and receive (simplex only) modes. If RX or TX CTCSS tones/DPL codes are required, they must be programmed in.

2.7 RECEIVE FREQUENCY SIMPLEX FUNCTION

The receive frequency simplex function allows you to quickly change the transmit frequency, when operating on a split pair (repeater/semi-duplex mode), to the receive frequency to allow direct communications. (For example, if you are transmitting on 42.000 MHz and receiving 42.555 MHz, press **FUNC**, then **UP** to transmit on 42.555 MHz. To return to the split pair condition, you must recall the memory channel again. This is quickly done by pressing **M.UP** for one step up, then back down one step with the **M.DN** key.)

2.8 KEYBOARD LOCKOUT FUNCTION

The keyboard can be locked out so that accidental pressing of keys does not change frequency, etc., unknowingly to the operator. To lock the keyboard, press **FUNC** then **LOCK**. This will disable all keyboard functions (except keyboard unlock) in the receive mode. The DTMF function during transmit will not be affected. To unlock the keyboard, press and hold the **LOCK** key for two seconds until the display indicates "UNLOCK".

2.9 VARIABLE FREQUENCY MODE FUNCTION

To enter variable frequency mode, press **RCL**, **0,0,0**, then **ENTER**. The memory channel that you were just in will still be valid but now you can manually adjust the frequency with the **M.UP**, **M.DN**, **UP** and **DN** keys. The **UP** and **DN** keys will make the frequency count up or down in steps of 2.5 kHz. The **M.UP** and **M.DN** keys will make the frequency count up or down in steps of 1 MHz. You can not change the label. The frequency in this mode cannot be stored in memory. To exit this mode, recall one of the 120 memory channels (e.g. **RCL**, **0,0,1**). Variable frequency mode is disabled when the internal entry disable jumper is set.

2.10 LED DISPLAY VARIABLE DIMMING MODE

1. With the transceiver in normal operating mode, press the **UP** or **DN** keys to increase or decrease the intensity of the LED display.
2. Once maximum intensity of the display is achieved, the **UP** key no longer functions. Conversely, once minimum intensity is reached, the **DN** key ceases to function.

2.11 90-SECOND TRANSMITTER TIME OUT FEATURE

A selectable 90-second transmitter time out feature is provided to prevent accidental continuous transmission in the event of a faulty PTT switch. With this feature enabled, the transceiver will stop transmitting after the PTT is engaged continuously for 90 seconds. The timer is reset by releasing then re-engaging the PTT switch.

Press the **FUNC** then the **M.UP** key. Use the **M.UP** and **M.DN** keys to select 90 SEC, which enables the feature, or NONE which disables it.

2.12 QUICK GUARD PROGRAMMING FEATURE

A quick download of any of the 120 memory positions to either of the guard memory positions can be accomplished. Select the memory position whose contents you desire to download to a guard memory. Select either GD1 or GD2 memory channel as desired. Press **FUNC**, then **7**. The guard memory channel will now contain all the same information as the selected memory position. This feature is disabled when guard jumper (J15, pins 1 and 2 on the MCU board) is removed.

2.13 PROGRAMMING CTCSS TONES/DPL CODES

CTCSS tones (PL tones) or Digital DPL codes can be assigned to each memory channel. The guard receiver squelch will operate only on carrier detection, but guard 1 and 2 transmit tones or codes can be programmed. To program a tone/code to a memory channel:

1. Use the **M.UP** and **M.DN** keys to select the memory channel that you want to assign a CTCSS tone or DPL code.
2. Press the **FUNC** key then the **TONE** key. The display will show "RX TONE:" and the current tone number, *as well as the tone frequency in Hz.*
3. Use the **M.UP** and **M.DN** keys to select the tone number you require. The following is a list of the available CTCSS tones:

| <u>Number</u> | <u>Tone</u> | <u>Number</u> | <u>Tone</u> | <u>Number</u> | <u>Tone</u> |
|---------------|-------------|---------------|-------------|------------------------|-------------|
| 01 | 67.0 | 26 | 162.2 | 51 | 177.3* |
| 02 | 71.9 | 27 | 167.9 | 52 | 183.5* |
| 03 | 74.4 | 28 | 173.8 | 53 | 189.9* |
| 04 | 77.0 | 29 | 179.9 | 54 | 196.6* |
| 05 | 79.7 | 30 | 186.2 | 55 | 199.5* |
| 06 | 82.5 | 31 | 192.8 | 56 | 206.5* |
| 07 | 85.4 | 32 | 203.5 | 57 | 210.7* |
| 08 | 88.5 | 33 | 33.0* | 58 | 218.1* |
| 09 | 91.5 | 34 | 35.4* | 59 | 225.7* |
| 10 | 94.8 | 35 | 36.6* | 60 | 229.1* |
| 11 | 97.4 | 36 | 37.9* | 61 | 233.6* |
| 12 | 100.0 | 37 | 39.6* | 62 | 241.8* |
| 13 | 103.5 | 38 | 44.4* | 63 | 250.3* |
| 14 | 107.2 | 39 | 47.5* | 64 | No Tone |
| 15 | 110.9 | 40 | 49.2* | (carrier squelch only) | |
| 16 | 114.8 | 41 | 51.2* | | |
| 17 | 118.8 | 42 | 53.0* | | |
| 18 | 123.0 | 43 | 54.9* | | |
| 19 | 127.3 | 44 | 56.8* | | |
| 20 | 131.8 | 45 | 58.8* | | |
| 21 | 136.5 | 46 | 63.0* | | |
| 22 | 141.3 | 47 | 69.4* | | |
| 23 | 146.2 | 48 | 159.8* | | |
| 24 | 151.4 | 49 | 165.5* | | |
| 25 | 156.7 | 50 | 171.3* | | |

TABLE 2.1 Available CTCSS tones

NOTE: The tones marked with * are non-standard tones.

4. Press ENTER. "TX TONE" appears on the display. Repeat step 3.
5. Press ENTER. "G1 TONE" appears on the display. Repeat step 3.
6. Press ENTER. "G2 TONE" appears on the display. Repeat step 3 and press ENTER.

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

7. The display will now show "RX DPL:" and the current 3-digit DPL code. If no DPL code is required "000" should be entered. Please note that if a DPL code is to be programmed a CTCSS tone should not be enabled.
8. Use the keypad to enter the required octal 3-digit DPL (Digital Coded Squelch or DCS) code. A list of all usable and unique octal 3-digit DPL/DCS codes is as follows:

| | | | | | | | | | | |
|------|------|------|------|------|------|------|------|------|-----|-----|
| 017* | 051 | 116 | 156 | 243 | 266* | 346 | 431 | 466 | 612 | 721 |
| 023 | 053* | 122* | 162 | 244 | 271 | 351 | 432 | 503 | 624 | 731 |
| 025 | 054 | 125 | 165 | 245 | 274* | 356* | 445 | 506 | 627 | 732 |
| 026 | 065 | 131 | 172 | 246* | 306 | 364 | 446* | 516 | 631 | 734 |
| 031 | 071 | 132 | 174 | 251 | 311 | 365 | 452* | 523* | 632 | 743 |
| 032 | 072 | 134 | 205 | 252* | 315 | 371 | 454* | 526* | 654 | 754 |
| 036* | 073 | 143 | 212* | 255* | 325* | 411 | 455* | 532 | 662 | |
| 043 | 074 | 145* | 223 | 261 | 331 | 412 | 462* | 546 | 664 | |
| 047 | 114 | 152 | 225* | 263 | 332* | 413 | 464 | 565 | 703 | |
| 050* | 115 | 155 | 226 | 265 | 343 | 423 | 465 | 606 | 712 | |

TABLE 2.2 Usable and unique octal 3-digit DPL/DCS

NOTE: * indicates GE Digital Coded Squelch (DCS) Code

9. Press ENTER. "TX DPL" appears on the display. Repeat step 8.
10. Press ENTER. "G1 DPL" appears on the display. Repeat step 8.
11. Press ENTER. "G2 DPL" appears on the display. Repeat step 8 and press ENTER.

2.14 PC MEMORY PROGRAMMING UP/DOWNLOAD CAPABILITY

The Technisonic Data Programmer (Multi-TDP) Windows based software is supplied on a CD with the TFM-30 transceiver or is available for download from our web site www.til.ca. This software will allow anyone with a standard personal computer (PC) and the PIB-100 programming box to send or retrieve data from a connected TFM-30 transceiver for editing, sorting and sharing with other Technisonic transceivers.

The Multi-TDP programmers are 32-bit Windows applications that will work under Windows 95/98, Windows NT 4.0 and Windows 2000. Documentation for each of the respective Programmers is available from the pull down "Help" menu at the top of the programmer display. To use the Windows based program with the TFM-30, the PIB-100 programming interface box P/N 001108-1 includes all required cables and must be purchased from Technisonic or other re-sellers.

The CD supplied with the transceiver also contains a DOS based download program that can be used with the TFM-30 and no interface box. However, changes in operating systems and PC hardware that have occurred since the release of our DOS compatible software prevent it from working with most modern computers. Computers with 486 processors or some early Pentium type processors of 200 MHz or less running MS-DOS seem to work the best.

Please check the "Programmer downloads" link on our website www.til.ca for further information regarding PC programming information for users of single band transceivers like the TFM-30.

The user instructions for the Windows based Multi-TDP software and then the DOS-based software follow below.

2.14.1 Windows Programming Requirements

1. PC compatible computer running Windows 95/98/NT/2000/ME. CD-ROM drive and an available serial port.
2. Bench power supply of 28 volts DC.
3. PIB-100 Programming Interface Box (P/N 001108-1) - use cables that are provided with the PIB-100 programming interface box.
Do not use cable P/N 943165-4 which is shown in FIGURE 2-2. It is for use with the DOS-program only.

2.14.2 Windows Program Installation:

1. Insert the CD into the drive.
2. Open the CD with windows explorer.
3. Open the Multi-TDP directory and double click the MultiTDP_Install.exe file.
4. Follow on the screen instructions.

2.14.3 Connections:

1. Follow the connection instructions supplied with the PIB-100.
2. Do not turn on the 28 volt power supply until all connections have been made.

2.14.4 Running the Windows Program:

1. On the computer, click the Start menu button.
2. Select Programs from the Start menu.
3. Select Technisonic from the Programs menu.
4. Select Multi-TDP.
5. The program will start. The Multi-TDP program is used for almost all Technisonic transceivers; therefore, it must be set up specifically for your TFM-30.
6. Pull down the File menu and click Select Radio.
7. Click the TFM-30/66/138/138B/403 line.
8. The display will configure itself for the PIB-100. Click the dot beneath TFM-30.
9. Pull down the Com Port menu and select the com port that you have connected the PIB-100.
10. The software is now ready to use. To get a full instruction manual, pull down the Help menu and select Documentation in PDF format.

2.14.5 Helpful Hints:

* When uploading or downloading, a message box will appear asking you to press FUNC and then 7 on the radio. Press these keys before clicking the OK button in the message box.

2.14.6 Dos Program Requirements:

1. PC compatible computer with:
 - 200 MHz or less
 - 486 or early Pentium 1 processor
 - Printer port (LPT1)
 - CD drive - If not, copy the software on another computer to a floppy disk.

- Colour monitor is preferred as some of the text is colour coded.
- 2. Bench power supply of 28 volts DC.
- 3. PC Download cable (P/N 943165-4) see FIGURE 2-2.

2.14.7 DOS Program Installation:

1. Insert the CD into the drive.
2. Create a directory on your hard drive called \TIL.
3. Copy everything from the \PCDL30 directory on the CD to the \TIL directory on the hard drive.

2.14.8 Connections:

1. Connect the PC download cable (P/N 943165-4) to the radio.
2. Connect the other end of the cable to the printer port on the computer
3. Connect the red and black leads to the power supply.

2.14.9 Running the DOS Program:

1. Turn on the 28 volt power supply.
2. Turn on the radio. The channels on the radio may start scrolling - this is normal.
3. Change to the \TIL directory and type PCDL30 and enter. The radio should stop scrolling.
4. Follow the menus to edit channels, print channel list, up or download as desired.
5. The data file is continuously updated as each change is made, so you don't have to save the file at any time. To have multiple data files, you will have to copy the data file to another name and then copy it back when needed. There always has to be a data file called "DATA30" or the program will not work.

2.14.10 Helpful Hints for the DOS program:

- * NEVER plug in the radio while the power supply is **on** or damage may occur to your printer port.
- * You can only use LPT1 as the printer port. Ensure it is enabled in the computer BIOS.
- * The program works best on older, slower computers but has worked on some new PCs running DOS. A good way to try this out is to make a DOS bootable floppy with the software on it running the software from the A: drive.

TFM-30 Upload/Download Programming Cable
P/N 943165-4 Wiring Diagram

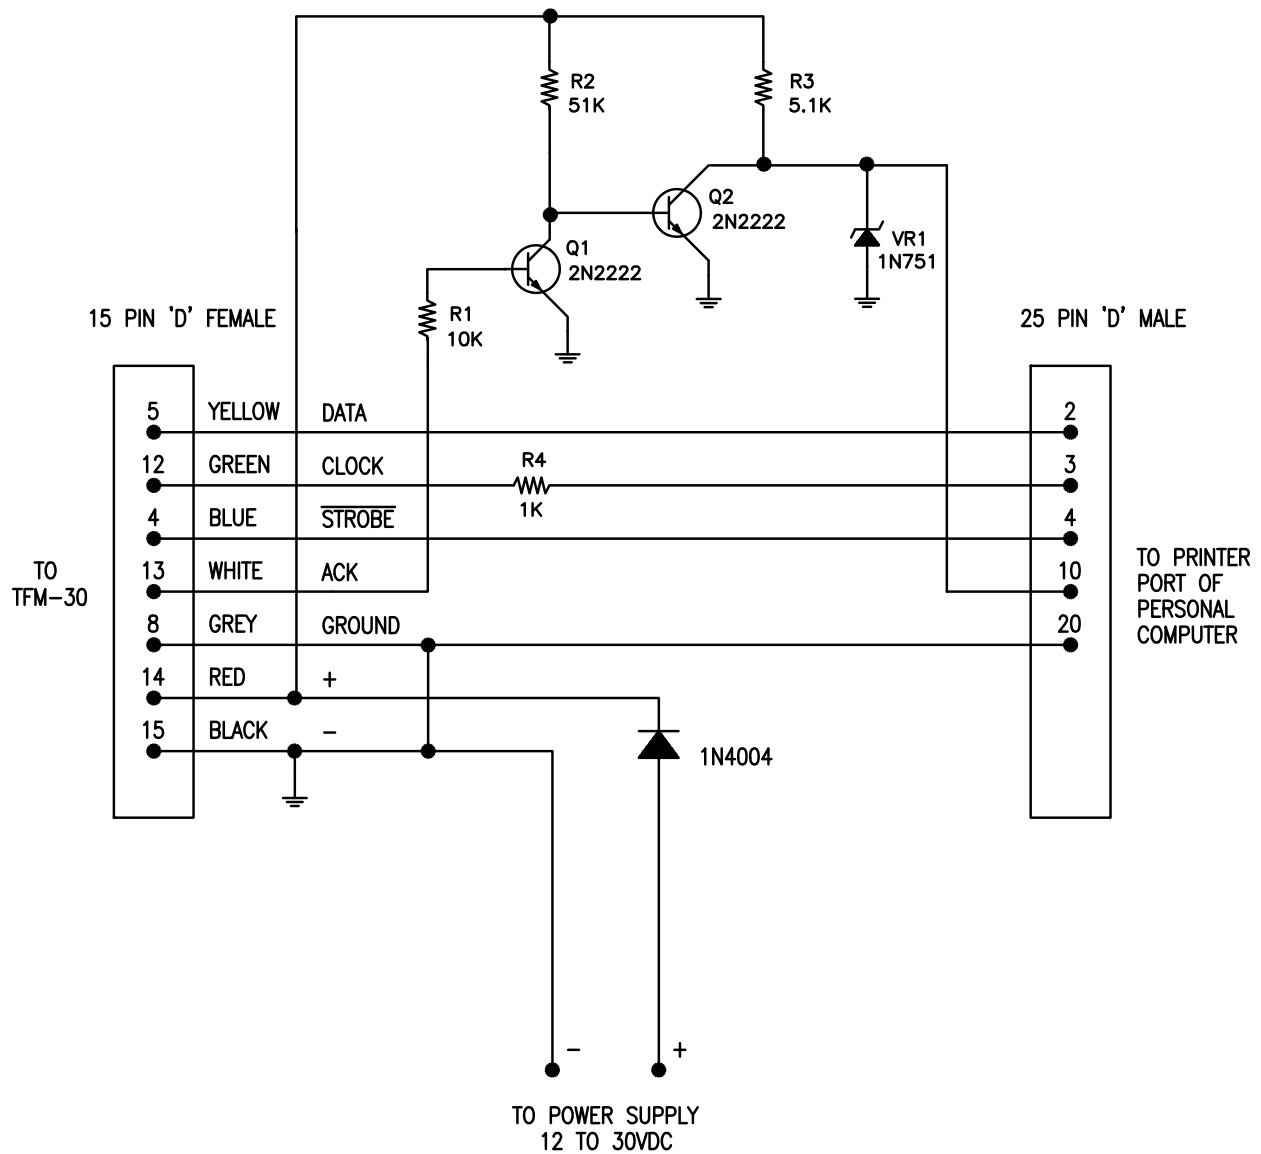


FIGURE 2.2 TFM-30 Transceiver PC Up/Download Cable - wiring diagram
(DOS program only)

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

This page left intentionally blank.

SECTION 3 – INSTALLATION INSTRUCTIONS

3.1 GENERAL

This section contains information and instructions for the correct installation of the TFM-30, VHF/FM Transceiver.

Make certain that the correct frequencies are pre-programmed in accordance with the equipment user's valid FCC operator's license, prior to installation.

3.2 EQUIPMENT PACKING LOG

Unpack the equipment and check for any damage that may have occurred during transit. Save the original shipping container for returns due to damage or warranty claims. Check that each item on the packing slip has been shipped in the container. Verify that the equipment display and backlighting configuration are the same as those ordered.

3.3 TRANSCEIVER INSTALLATION

The TFM-30 series Transceivers are designed to be Dzus mounted and should be installed in conjunction with an IN-30 installation kit. See FIGURE 3-1 for an outline drawing of the unit with dimensions to facilitate the installation.

3.4 INSTALLATION KIT - CONTENTS

The IN-30 installation kit consists of:

1. One 15-pin (female) and one 9-pin (male) Cannon D mating connector complete with crimp pins and hoods.
2. One BNC antenna mating RF connector (male) and hood.

3.5 ANTENNA INSTALLATION

The antenna should be mounted on the bottom of the aircraft whenever possible. Consult with instructions provided with the antenna. Connect RF cable from antenna to the back of the TFM-30 unit by utilizing the BNC mating connector provided in the installation kit.

3.6 INSTALLATION - PIN LOCATIONS AND CONNECTIONS

The pin numbers and locations for the 15- and 9-pin Cannon D-connectors located on the rear of the TFM-30 transceiver are shown below. Pin connections are provided in TABLES 3-1 and 3-2.

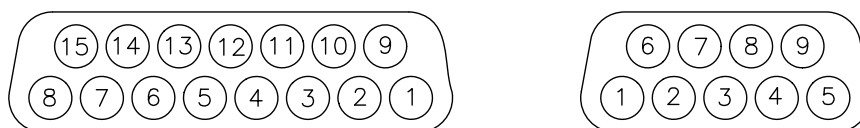


FIGURE 3 Transceiver mounted view of 15-pin male and 9-pin female connector

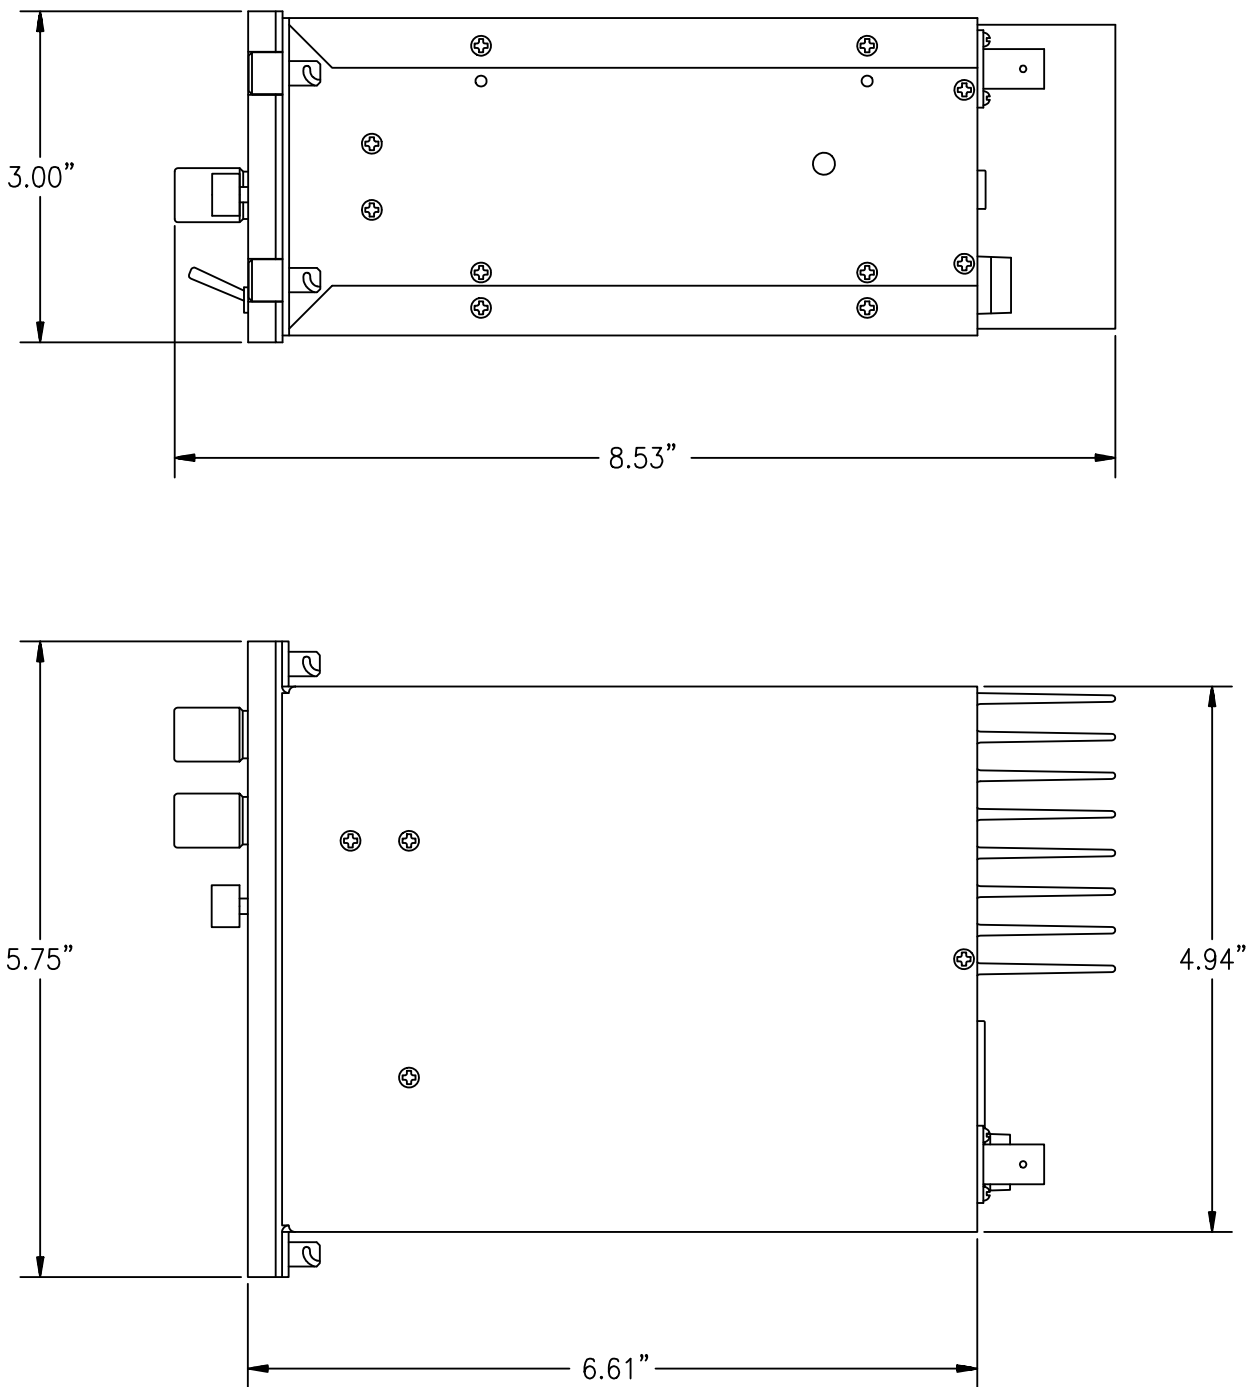


FIGURE 3.1 Outline Drawing for Model TFM-30 Transceiver

3.6 INSTALLATION - PIN LOCATIONS AND CONNECTIONS (continued)

| TFM-30 Transceiver 15-Pin D Connections | |
|--|--------------------------------|
| Pin # | Description |
| 1 | 600 Ω Output |
| 2 | Data Output |
| 3 | Panel Lighting (28VDC or 5VAC) |
| 4 | Memory UP/PC Download Input |
| 5 | Memory Down/PC Download Input |
| 6 | Mic Signal Input |
| 7 | Main Power +28VDC |
| 8 | Main Ground |
| 9 | 4-ohm Speaker Output |
| 10 | 4-ohm/600-ohm Output Ground |
| 11 | Data Input |
| 12 | PC Download Input |
| 13 | PTT (Ground Keying) |
| 14 | Main Power +28VDC |
| 15 | Main Ground |

TABLE 3.1 Wire connections on a 15-Pin MALE D-Connector

| TFM-30 Transceiver 9-Pin D Connections | |
|---|---------------------|
| Pin # | Description |
| 1 | 10 MHz. Band Select |
| 2 | 8 MHz. Band Select |
| 3 | 4 MHz. Band Select |
| 4 | 40 MHz. Band Select |
| 5 | Tune Enable |
| 6 | 20 MHz. Band Select |
| 7 | Ground |
| 8 | Spare |
| 9 | +28V Source |

TABLE 3.2 Wire connections on a 9-Pin FEMALE D-Connector

3.7 WIRING INSTRUCTIONS – 15-PIN D-CONNECTOR

Figure 3-2 shows all required connections and recommended wire sizes for the TFM-30 Transceiver.

3.7.1 Main Power +28 VDC

The main power +28VDC ($\pm 15\%$) is connected to pins 7 and 14 of the 15-pin D-connector on the transceiver. Both pins should be connected.

3.7.2 Main Ground

Ground connections for the transceiver are made on pins 8 and 15. Both pins should be connected.

3.7.3 PTT (Ground Keying)

The PTT line is connected to pin 13 and should be floating when the transceiver is in receive mode, and grounded during transmit mode.

3.7.4 Front Panel Back Lighting

Front panel back lighting connection should be made on pin 3 of the transceiver. The opposite end of this lead should be connected to the panel lighting system of the aircraft. Before connecting, verify the required panel lighting voltage (28 VDC or 5 VAC) on the transceiver configuration control label.

3.7.5 Audio Outputs (600 ohms and 4 Ohms)

The audio output from pin 9 can be used to drive a 4 ohm speaker up to 2.5 watts. Audio output from pin 1 is 600 ohms, 0.5 watts maximum.

3.7.6 Audio Output Ground

Pin 10 is the ground for both the 4 ohm and 600 ohm audio output signals on pins 9 and 1.

3.7.7 Mic Signal Input

The microphone input signal is to be provided on pin 6, utilizing shielded wire with the shield grounded to pin 10.

3.7.8 Memory Up/Memory Down

Remote scrolling through the 120 memory positions can be achieved by providing a ground to pins 4 (up) and 5 (down) through a momentary contact cyclic switch.

3.7.9 Data Input

Data communications equipment requiring direct access to the modulator and discriminator can be connected via pins 2 and 11. Data cannot be transmitted in CANADA unless equipment is approved for use with the TFM-30 by the communications regulatory authority.

3.8 WIRING INSTRUCTIONS – 9-Pin D-CONNECTOR

The 9-pin D-connector provides the necessary connections to facilitate the use of an external Antenna Tuner Unit (ATU). Table 3-2 lists the signals and connections available from the TFM-30. Refer to the Antenna Tuner instructions for specific wiring.

3.8.1 Power Source

Pin 9 supplies +28 volts and pin 7 provides a power and signal ground to the ATU.

3.8.2 Tune Enable

Pin 5 activates the ATU during transmit. Active High (+28V).

3.8.3 Band Select Outputs

The 30 to 50 MHz band is broken up into 6 segments for ATU pre-tuning. The band select outputs, pins 1,2,3,4 and 6, provide active low BCD signals corresponding to the band segment in use. Refer to Table 3-3.

| Band Select Output Truth Table | | | | | |
|--------------------------------|------------------|------------------|-------------------|-------------------|-------------------|
| Band Segment (MHz) | Pin 3 (4 MHz) | Pin 2 (8 MHz) | Pin 1 (10 MHz) | Pin 6 (20 MHz) | Pin 4 (40 MHz) |
| 30 - 33.9975 | 1 | 1 | 0 | 0 | 1 |
| 34 - 37.9975 | 0 | 1 | 0 | 0 | 1 |
| 38 - 39.9975 | 1 | 0 | 0 | 0 | 1 |
| 40 - 43.9975 | 1 | 1 | 1 | 1 | 0 |
| 44 - 47.9975 | 0 | 1 | 1 | 1 | 0 |
| 48 – 50 | 1 | 0 | 1 | 1 | 0 |

* **Note** * Band Select Outputs are active Low. High (1) = +12v Low (0) = 0v

TABLE 3.3 Band Select Output Truth Table

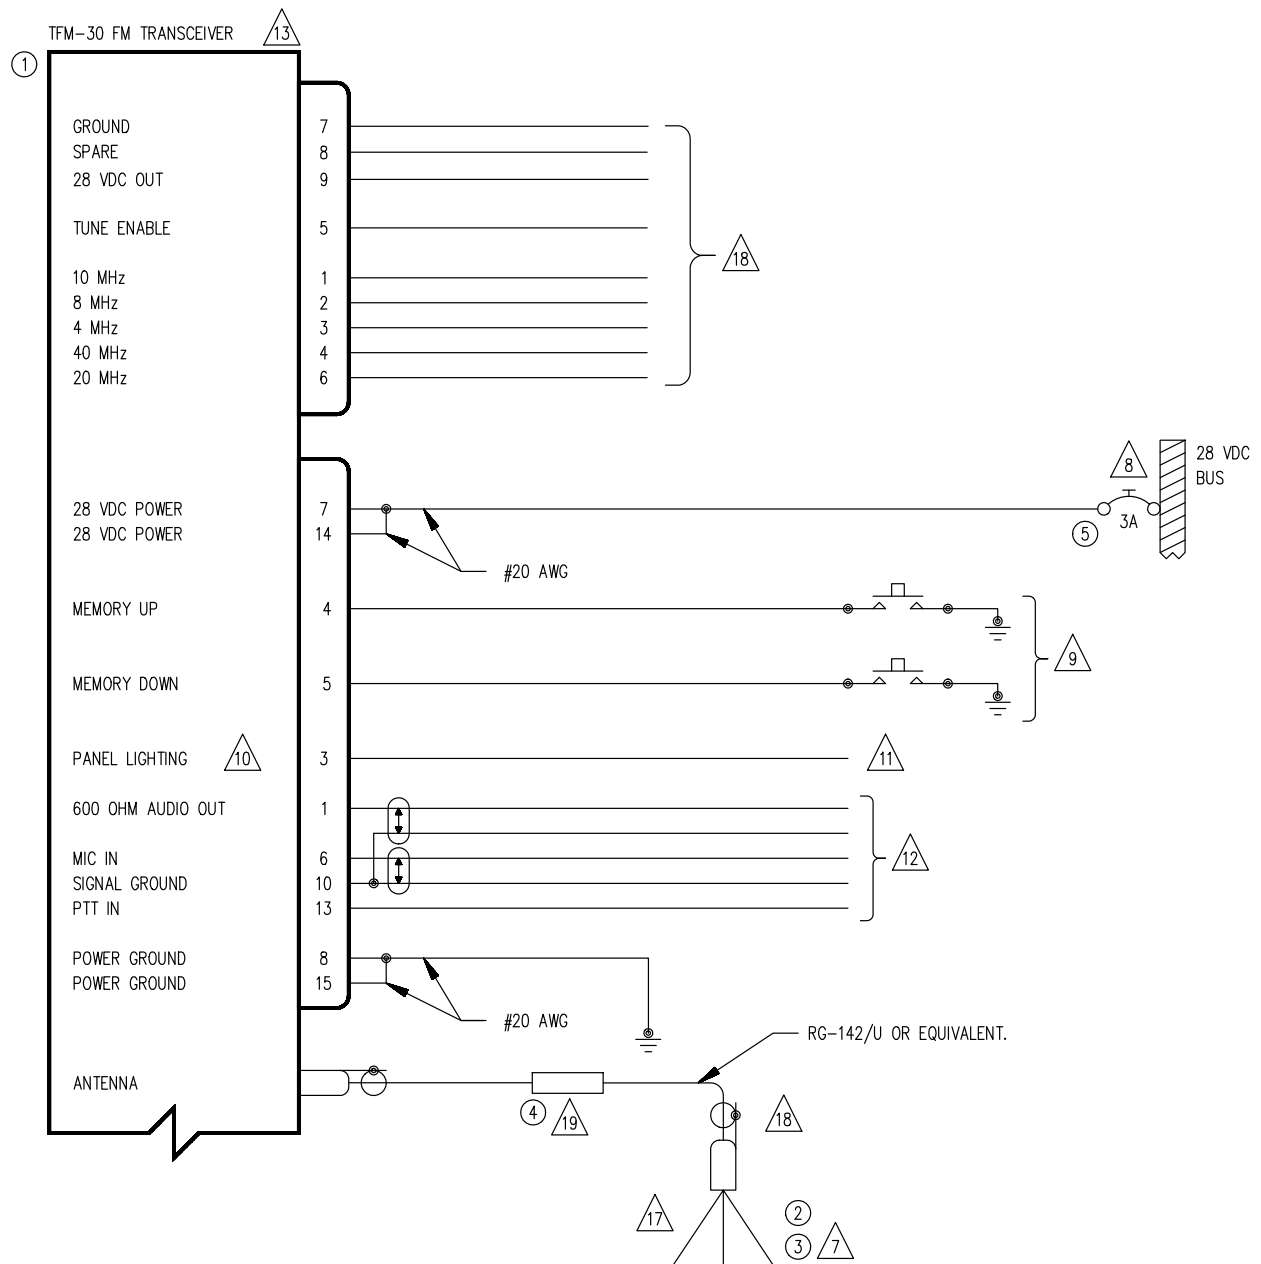


FIGURE 3.2a Wiring Connections for a Model TFM-30 Transceiver

TECHNISONIC INDUSTRIES LIMITED
www.til.ca

| QTY | ITEM | PART NUMBER | DESCRIPTION | SPEC | MATERIAL |
|-----|------|-------------|-------------------------------------|--------------------------------|----------|
| 1 | 1 | TFM-30 | VHF /FM COMMUNICATIONS TRANSCEIVER. | TECHNISONIC INDUSTRIES LIMITED | |
| 1 | 2 | FLX-3050B | ANTENNA | FOXTRONICS | |
| 1 | 3 | S65-B282-34 | ALTERNATE ANTENNA | SENSOR SYSTEMS | |
| 1 | 4 | 061244-1 | LOW PASS FILTER | TECHNISONIC INDUSTRIES LIMITED | |
| 1 | 5 | 7274-11-3 | CIRCUIT BREAKER, 3 AMPS | KLIXON | |

NOTES:

- 1) ALL WIRE IAW MIL-W-22759 UNLESS OTHERWISE SPECIFIED.
- 2) ALL CABLE IAW MIL-C-27500 UNLESS OTHERWISE SPECIFIED.
- 3) COAXIAL CABLE IAW MIL-C-17 UNLESS OTHERWISE SPECIFIED. DO NOT USE COAX WITH PVC INSULATION.
- 4) FABRICATION & INSTALLATION OF WIRING HARNESS IAW AC 43.13-1A CHAPTER 11, SECTION 3, PARA 445 TO 462 AND SECTION 7.
- 5) GROUNDING AND BONDING IAW AC 43.13-1A CHAPTER 11, SECTION 3, PARA 452.
- 6) ALL SINGLE WIRE TO BE #22 AWG MINIMUM AND ALL SHIELDED WIRE TO BE #24 AWG MINIMUM, UNLESS OTHERWISE SPECIFIED.
- 7) INSTALLATION OF ANTENNA IAW AC 43.13-1A CHAPTER 2, SECTION 3, CHAPTERS 5 & 6, AND AC 43.13-2A CHAPTER 3. IF POSSIBLE, THE ANTENNA SHOULD BE LOCATED A MINIMUM OF 12 FT FROM AIRCRAFT NAVIGATION RECEIVER ANTENNAS AND A MINIMUM OF 4 FEET FROM AIRCRAFT COMMUNICATIONS AND ELT ANTENNAS. BE CAREFUL NOT TO CHOOSE SEPARATIONS THAT CLOSELY APPROXIMATE 1/4 OR 1/2 OR WHOLE NUMBER MULTIPLES OF THE NAVIGATION OR COMMUNICATIONS SYSTEM WAVELENGTH.
- 8) AN EQUIVALENT CIRCUIT BREAKER OR FUSE MAY BE USED.
- 9) THE MEMORY UP/DOWN PUSH BUTTONS ARE OPTIONAL.
- 10) THE TFM-30 IS AVAILABLE WITH 28V OR 5V PANEL LIGHTING. CHECK THE CONFIGURATION CONTROL LABEL FOR THE CORRECT VOLTAGE.
- 11) CONNECT TO THE APPROPRIATE AIRCRAFT DIMMING BUS.
- 12) CONNECT TO THE AIRCRAFT AUDIO SYSTEM OR STAND-ALONE HEADSET JACKS.
- 13) INSTALLATION OF TRANSCEIVER IAW AC 43.13-1A CHAPTER 2, SECTION 3 AND AC 43.13-2A, CHAPTER 2. PR 3 1/2 DZUS RAIL OR EQUIVALENT MAY BE USED.
- 14) TEST THE SYSTEM IN ACCORDANCE WITH THE POST-INSTALLATION TEST PROCEDURE IN THE INSTALLATION AND OPERATING INSTRUCTIONS MANUAL.
- 15) REFER TO THE AIRCRAFT STRUCTURAL REPAIR MANUAL AND THE MAINTENANCE MANUAL FOR INSTRUCTIONS AND INFORMATION PERTINENT TO THIS INSTALLATION.
- 16) THE USE OF RED DISPLAYS SHOULD BE MINIMIZED OR AVOIDED SO AS NOT TO DETRACT FROM THE ATTENTION GETTING CHARACTERISTICS NEEDED IN WARNING AND CAUTION ANNUNCIATORS. RED SHOULD BE USED TO ANNUNCIATE EMERGENCY CONDITIONS REQUIRING IMMEDIATE RESPONSE BY THE FLIGHT CREW. UNITS WITH RED DISPLAYS SHOULD NOT BE LOCATED IN CLOSE PROXIMITY TO WARNING AND CAUTION ANNUNCIATORS. THE INSTALLATION OF UNITS WITH RED DISPLAYS MUST BE EVALUATED ON A CASE BY CASE BASIS TO ENSURE THAT THE EFFECTIVENESS OF THE WARNING AND CAUTION ANNUNCIATORS IS NOT ADVERSELY AFFECTED.
- 17) INSTALL EITHER LOWBAND ANTENNA ITEM #2 or #3.
- 18) TO EXTERNAL ANTENNA TUNER WHEN USED. REFER TO TUNER INSTALLATION INSTRUCTIONS.
- 19) LOWBAND ANTENNA FILTER ITEM #4 MUST BE INSTALLED WHEN SENSOR SYSTEMS ANTENNA (ITEM #3) IS USED. FILTER MUST BE WELL BONDED TO RADIO CHASSIS.

FIGURE 3.2b Wiring Connections for a Model TFM-30 Transceiver

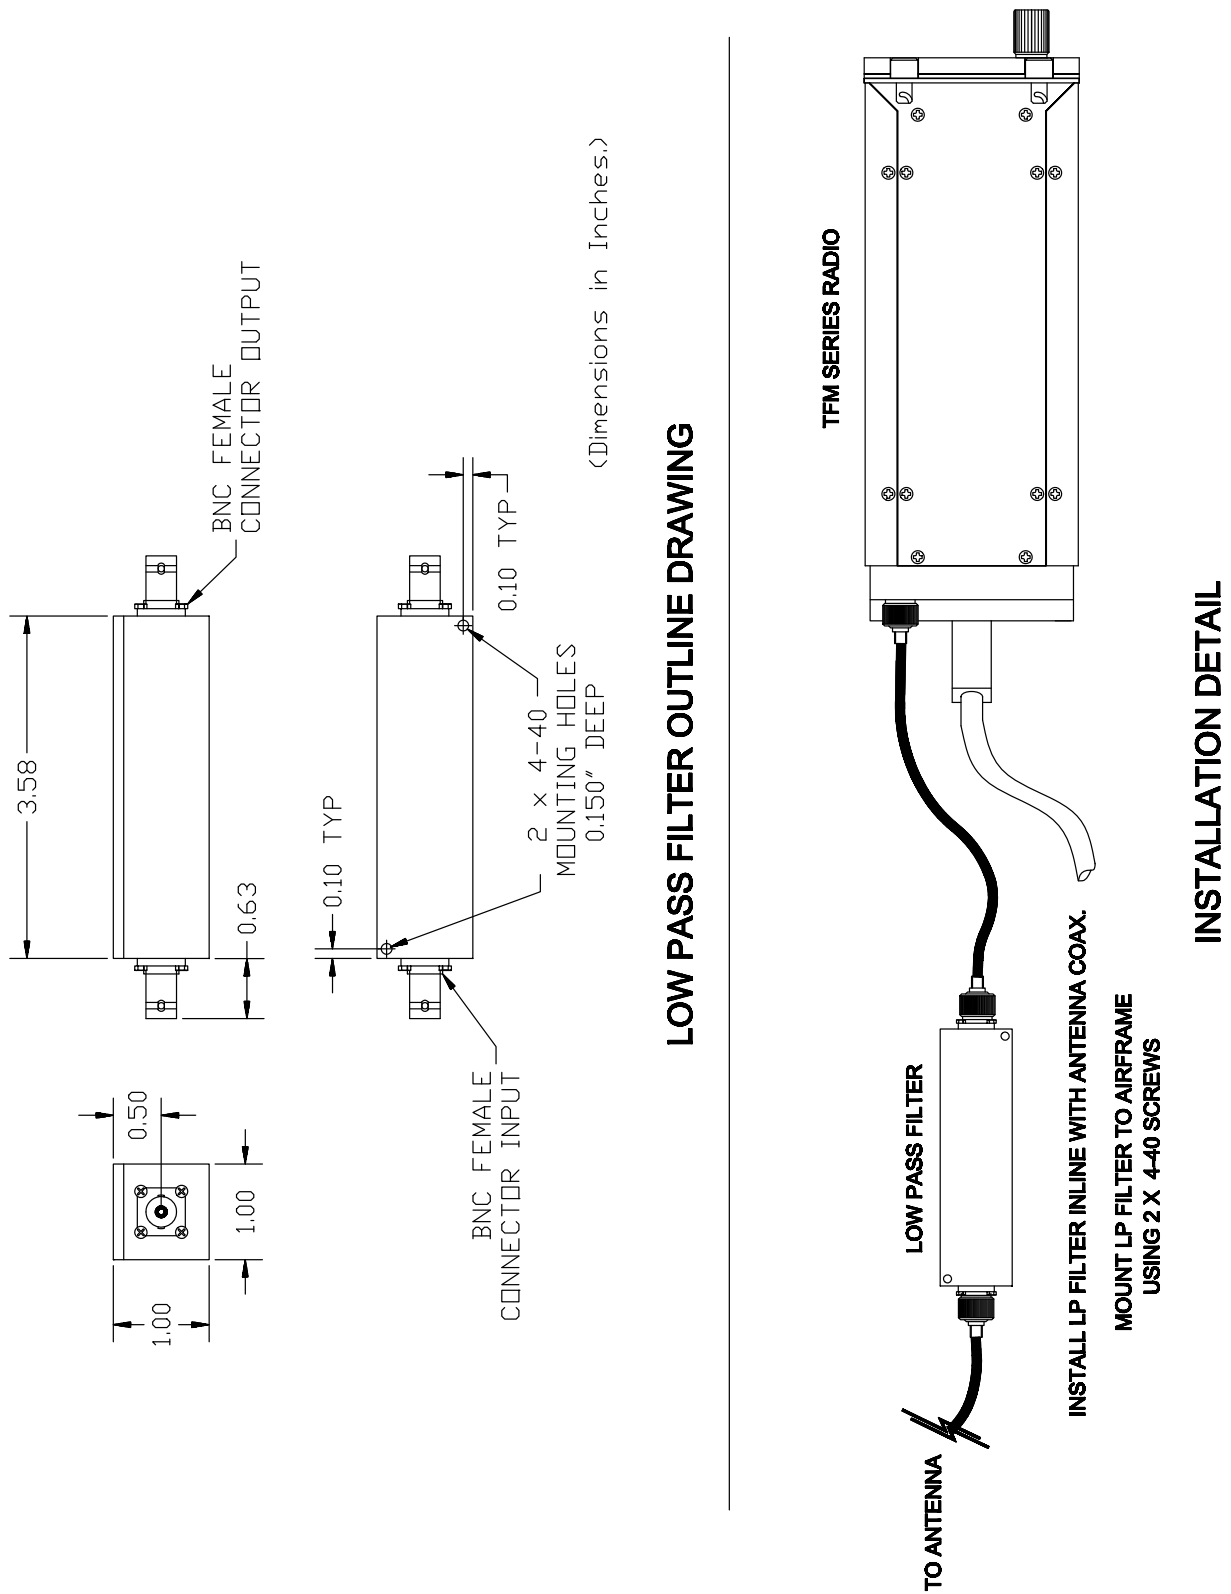


FIGURE 3.3 Low Pass Filter Outline Drawing and Installation Detail


3.9 INTERNAL PROGRAMMING AND GUARD ENABLE/DISABLE JUMPER

The programming and direct frequency entry modes can be disabled by removing the internal enable/disable jumper strap from pins 2 and 3 of J15. Removal of this jumper will prevent operation on any frequencies other than those programmed in the 120 memory positions and two guard receiver memory positions. Removal of the guard receiver programming enable/disable jumper strap from pins 1 and 2 of J15 will totally disable the operator's ability to re-program the 2 guard receiver channels.

The transceiver is always shipped with the two jumpers in the entry enable positions. To place either of the jumpers in the disable position:

1. Remove and retain the seven #4-40 screws securing the bottom cover of the transceiver to its chassis.
2. Remove and retain the four #4-40 screws securing the guard receiver PCB module in the chassis tray. Remove the guard receiver module from the chassis tray.
3. Remove and retain the five screws securing the chassis tray to the main chassis. Remove the chassis tray.
4. You should now have access to the Microprocessor Control Unit (MCU) PCB Module (See FIGURE 3-4). Remove the enable/disable jumper from pins 3 and 4 or pins 1 and 2 of J15, as desired.
5. Reverse steps 1 through 3 and secure all screws to re-assemble the transceiver.

Microprocessor Control Unit (MCU) PCB Module

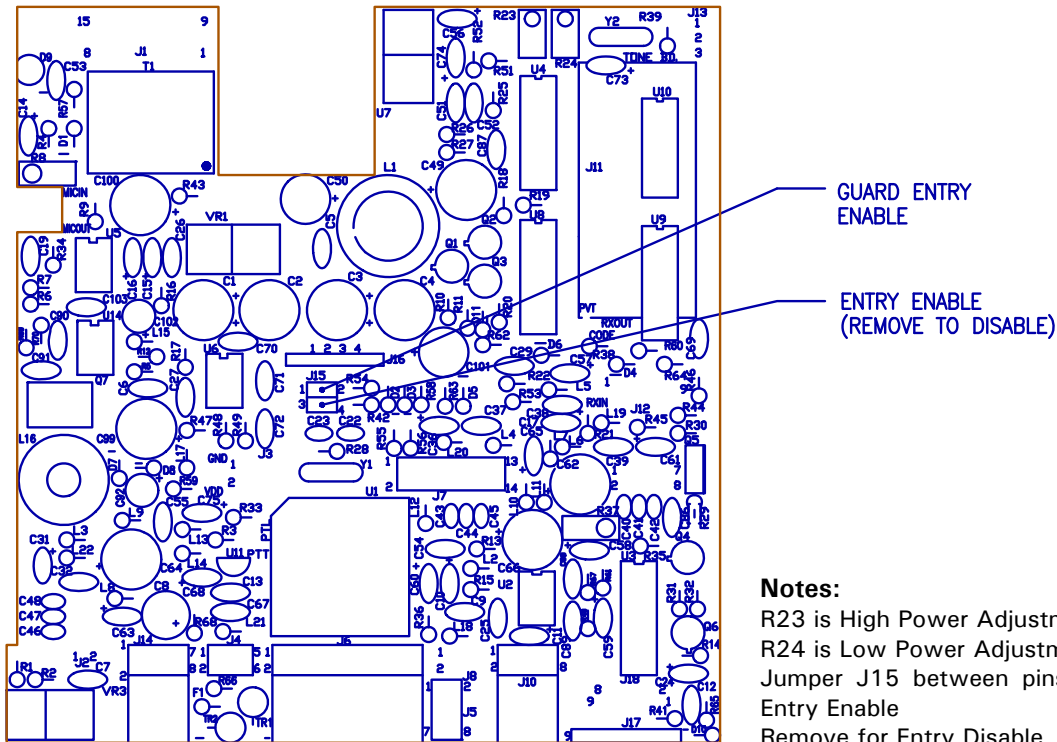

3.10 TRANSMITTER POWER ADJUSTMENTS

The transmitter power is adjusted to a maximum of 10 watts in high power mode and 1 watt in low power mode over the transceiver operating bandwidth at the factory. If transmitter RF power re-adjustment is required, perform as follows:

1. Remove bottom cover as described in the previous paragraph 3.8. Access to the two adjustment potentiometers on the Microprocessor Control Unit (MCU) PCB Module is provided by two access holes located at the back of the chassis tray.
2. Connect an RF through-line wattmeter to the antenna connector. Set the operating frequency to 40.000 MHz and key the transmitter.
3. In low power mode, set the low power adjustment potentiometer R24 to produce 1.0 watt of RF output power (See FIGURE 3-4).
4. In high power mode, set high power adjustment potentiometer R23 to produce 9.5 watts of RF output power.
5. Verify that the RF output power is between 9 and 10 watts on 30.000 MHz, 40.000 MHz and 50.000 MHz.
6. Replace bottom cover as described in the previous paragraph 3.8.

3.11 TRANSMITTER MICROPHONE LEVEL ADJUSTMENT

1. Set the transceiver operating frequency to 40.000 MHz and connect an appropriate test receiver to the RF output connector. Ensure that the output of the transceiver is terminated into a proper dummy load.
2. Key the transmitter and input a -10 dBm (0.25 VRMS), 1 kHz audio signal into the microphone input.
3. Adjust the microphone level potentiometer (R8 on MCU module) through the access hole located on the right side of the chassis (see FIGURE 3-5) to produce a 2.4 kHz deviation.
4. Verify that the deviation is at least 2.2 kHz on the following frequencies: 30.000 MHz, 40.000 MHz and 50.000 MHz.

3.12 TRANSMITTER SIDETONE LEVEL ADJUSTMENT

1. Set the transceiver operating frequency to 40.000 MHz and connect an appropriate test receiver to the RF output connector. Ensure that the output of the transceiver is terminated into a proper dummy load.
2. Key the transmitter and input a -10 dBm (0.25 VRMS), 1 kHz audio signal into the microphone input.
3. Adjust the sidetone level potentiometer (R37 on MCU module) through the access hole located on the left side of the chassis (see FIGURE 3-5) to produce a 0 dBm (0.774 VRMS) 600 ohm audio output.

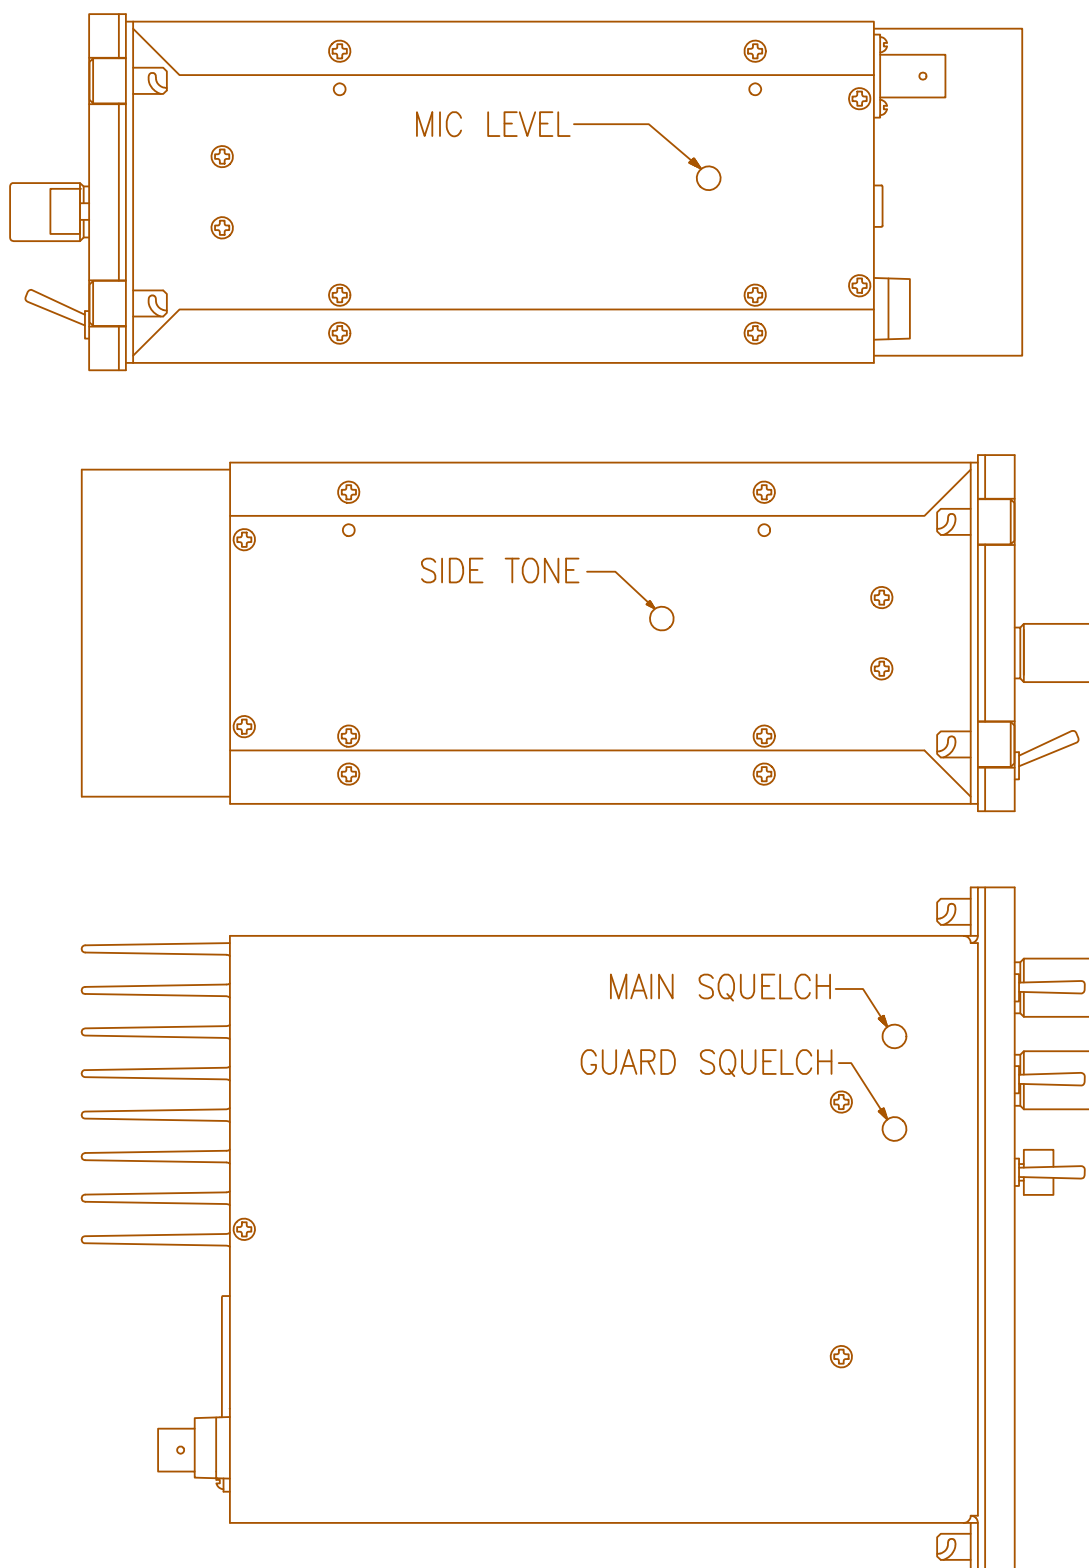


FIGURE 3.5 Microphone and Sidetone Level, Main and Guard Squelch Adjustment Access Holes

3.13 MAIN AND GUARD SQUELCH ADJUSTMENT

The squelch, on both the main and guard receivers, is factory set to open at approximately 1.0 micro volts. This adjustment can be made or altered to suit local conditions as follows:

1. Set the main receiver of the transceiver to 39.500 MHz. Connect a signal generator to the antenna input of the transceiver.
2. Set the signal generator to produce a ± 3 kHz deviation with a 1 kHz tone on 39.500 MHz. Increase the signal generator RF level from 0.1 μ V until the squelch indicator LED is on. Verify the receiver SINAD ratio is between 12 and 14 dB.
3. If not, re-adjust main receiver squelch potentiometer, R3 through the access hole located on the bottom of the transceiver chassis (see FIGURE 3-5).
4. Repeat the above procedure to adjust the guard receiver squelch setting using guard receiver squelch adjustment potentiometer, R4 (see FIGURE 3-5).

3.14 TRANSMITTER DEVIATION ADJUSTMENT


1. Remove and retain the eight #4-40 screws securing the top cover of the transceiver to its chassis. You should now have access to the Main Rx/Tx Module.
2. Set the transceiver operating frequency to 40.000 MHz and connect an appropriate test receiver to the RF output connector. Ensure that the output of the transceiver is terminated into a proper dummy load.
3. Key the transmitter and input a +13 dBm (3.46 VRMS), 2.5 kHz audio signal into the microphone input.
4. Adjust the wideband deviation limit potentiometer, R21 on the main Rx/Tx module (see FIGURE 3-6) to produce a ± 4.2 kHz deviation. Adjust the narrowband deviation limit potentiometer, R16 on the main Rx/Tx module to produce a ± 2.1 kHz deviation.
5. Verify that the deviation does not exceed ± 5 kHz for wideband and ± 2.5 kHz for narrowband on the following frequencies: 30.000 MHz, 40.000 MHz and 50.000 MHz. Readjust R21 or R16 as required, if the deviation exceeds ± 5 kHz or ± 2.5 kHz, respectively.
6. Place top cover on transceiver chassis and secure all eight screws.

3.15 GUARD RECEIVER AUDIO LIMIT FEATURE

Upon special request, 1 mW of guard receiver audio bleed with the guard volume control in the fully CCW (OFF) position, can be provided. This feature can be disconnected as follows:

1. Remove and retain the seven #4-40 screws securing the bottom cover of the transceiver to its chassis.
2. Find the jumper located at the bottom of the front panel is connected between the CCW position of the guard audio potentiometer (R2) and ground. Remove this jumper.
3. Replace the bottom cover of the transceiver and secure with the seven screws removed in step 1.

Main Receiver/Transmitter PCB Module

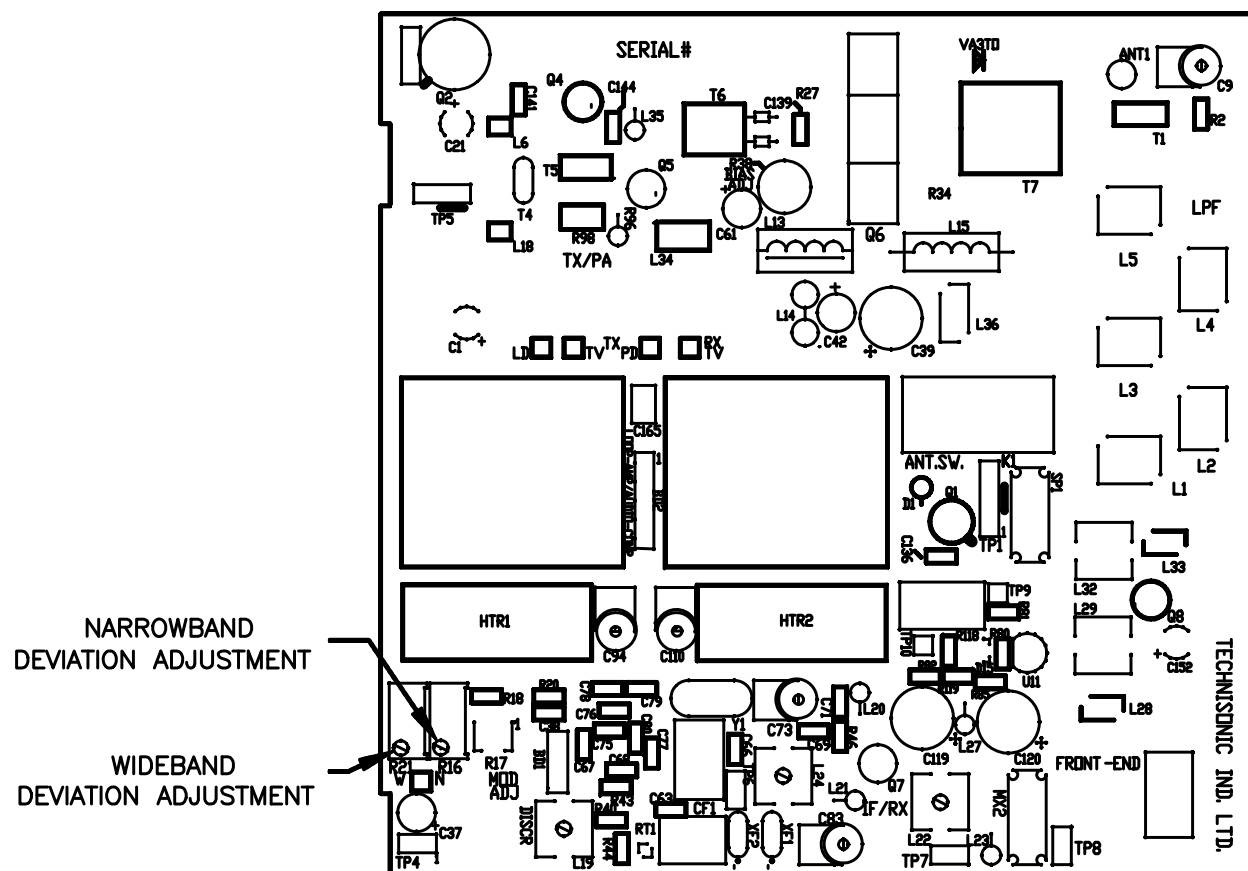

Notes: R21 is for 5.0 kHz (wideband) Deviation Adjustment
R16 is for 2.5 kHz (narrowband) Deviation Adjustment

FIGURE 3.6 Deviation Adjustment Potentiometer Location

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

This page left intentionally blank.

APPENDIX A– POST INSTALLATION EMI TEST INSTRUCTIONS

PURPOSE

The purpose of this test is to identify any interference that the TFM-30 may cause with existing aircraft systems.

TEST CONDITIONS

The TFM-30 should be installed and function tested. The antenna VSWR should be checked. A forward/reverse power check with a in-line wattmeter should show no more than 10% reflected power.

METHODOLOGY

Most of the EMI tests can be accomplished on the ground. In some cases, flight testing is required or easier. If the aircraft is approved for IFR operations, then it is mandatory that interference between the TFM-30 and the approach aids be checked in flight.

The GPS should be operational and navigating with at least the minimum compliment of satellites. The VHF comm should be set to the frequencies indicated with the squelch open. VOR/ILS/GS receivers should be set to the frequencies indicated and selected for display. If possible, set up a VOR/ILS ramp test set on the frequencies indicated and adjust the output until the flags are out of view. The transponder and encoder should be monitored with ramp test equipment. If possible set the ADF to a nearby navigation station.

Modulate the TFM-30 transmitter on the indicated frequencies for at least 20 seconds. Observe the GPS for any degradation in satellite status or availability or flags. Listen for any noise or detected audio signals on the VHF comm(s). Listen for any noise or detected audio signals on the VOR/LOC receiver audio. Look for any moment of flags or needles on the VOR/LOC/GS navigation display(s).

List the power plant, fuel and other electric instruments in the chart provided and note any anomalies that occur while transmitting. Assess the results.

If the aircraft is equipped with an autopilot or a stability augmentation system, then test fly the aircraft and verify that the operation TFM-30 does not have adverse effects on these systems. After checking for gross effects at a safe altitude, fly an approach with each of the different navigation systems coupled to the autopilot (ILS, GPS, etc.) and look for any anomalies.

RESULTS

If the installed system passes all of the applicable EMI tests, then no further action is required. If interference is observed then the interference must be assessed against the appropriate standards of airworthiness for the system in question. For example it is permissible for a VFR certified GPS to lose navigation capability while the TFM-30 is transmitting, providing that it recovers properly and promptly, but it is not permissible for an IFR Approach certified GPS to be affected in the same way.

A complete discussion of all the standards of airworthiness to be applied in assessing EMI effects is beyond the scope of this document.

PROCEDURE

- A.** Operate the TFM-30 transmitter on the following frequencies for at least 20 seconds. Observe the GPS for any degradation in satellite status or availability or flags.

| FREQUENCIES | GPS #1 | | GPS #2 | |
|--------------------|---------------|-------------|---------------|-------------|
| TFM-30 | PASS | FAIL | PASS | FAIL |
| 39.3850 MHz | | | | |

NOTES:

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

- B.** Modulate the TFM-30 transmitter on the following frequencies for at least 20 seconds. Listen for any noise or detected audio signals on the VHF comm.

| FREQUENCIES | | RESULTS | |
|-------------|---------|---------|------|
| VHF #1 | TFM-30 | PASS | FAIL |
| 118.0 | 34.0000 | | |
| 118 .0 | 45.0000 | | |
| | | | |

| FREQUENCIES | | RESULTS | |
|-------------|---------|---------|------|
| VHF #2 | TFM-30 | PASS | FAIL |
| 118.0 | 34.0000 | | |
| 118 .0 | 45.0000 | | |
| | | | |

NOTES:

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

- C. Establish the relative ultimate sensitivity of the ILS receiver using a NAV simulator, then increase the simulator signal by 17dB. Modulate the TFM-30 transmitter on or as close to the following frequencies for at least 20 seconds. Listen for any noise or detected audio signals on the receiver audio; look for any movement of flags or needles on the navigation displays.

| FREQUENCIES | | RESULTS | |
|-------------|---------|---------|------|
| VOR/ILS #1 | TFM-30 | PASS | FAIL |
| 108.000 | 36.0000 | | |
| 108.100 | 36.0325 | | |
| | | | |

| FREQUENCIES | | RESULTS | |
|-------------|---------|---------|------|
| VOR/ILS #2 | TFM-30 | PASS | FAIL |
| 108.000 | 36.0000 | | |
| 108.100 | 36.0325 | | |
| | | | |

A placard is required unless the above test is performed and passed. The placard shall read "Use of the transmitting function of the TFM-30 in the range of 36 to 40 MHz is prohibited during IFR approach operations." This placard must be placed adjacent to the TFM-30. The placard must be high contrast, clearly legible and indelible.

NOTES:

- D.** Modulate the TFM-30 transmitter on the following frequencies for at least 20 seconds. Look for any moment of flags or needles on the navigation display.

| FREQUENCIES | | RESULTS | |
|---------------|---------|---------|------|
| G/S #1 | TFM-30 | PASS | FAIL |
| 334.7 (108.1) | 33.4700 | | |
| | | | |
| | | | |

| FREQUENCIES | | RESULTS | |
|---------------|---------|---------|------|
| G/S #2 | TFM-30 | PASS | FAIL |
| 334.7 (108.1) | 33.4700 | | |
| | | | |
| | | | |

NOTES:

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

NOTE: For the following tests, select a frequency at the top, middle and bottom of the range of the TFM-30.

Frequency #1 _____

Frequency #2 _____

Frequency #3 _____

- E.** At a safe altitude engage the autopilot or stability augmentation system. Modulate the TFM-30 transmitter on the above frequencies for at least 20 seconds. Observe any effect on the autopilot or stability augmentation system.

Observations:

- F.** Perform a coupled ILS approach to the aircraft's certified limits. Modulate the TFM-30 transmitter on the above frequencies for at least 20 seconds. Observe any effect on the autopilot. Repeat for each different system such as ILS #2, GPS, FMS, etc.

Observations:

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

- J. List the power plant, fuel and other electric instruments in the chart provided and note any anomalies that occur while transmitting. Assess the results.

| STEP | SYSTEM | PASS | FAIL | NOTES |
|------|-------------------|------|------|-------|
| 1 | Xponder & Encoder | | | |
| 2 | ADF 1 & 2 | | | |
| 3 | VG | | | |
| 4 | Compass | | | |
| 5 | Directional Gyro | | | |
| 6 | Oil Pressure | | | |
| 7 | Fuel Pressure | | | |
| 8 | Oil Temp | | | |
| 9 | Amps | | | |
| 10 | Bus Voltage | | | |
| 11 | Fuel % | | | |
| 12 | Ng | | | |
| 13 | TOT | | | |
| 14 | Torque % | | | |
| 15 | Annunciators | | | |
| 16 | Digital Clock | | | |
| 17 | | | | |
| 18 | | | | |
| 19 | | | | |
| 20 | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

| STEP | SYSTEM | PASS | FAIL | NOTES |
|---------------|--------|------|------|-------|
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| NOTES: | | | | |

Technisonic Industries Limited
240 Traders Blvd., Mississauga, ON Canada L4Z 1W7
Tel: (905) 890-2113 Fax: (905) 890-5338

**IMPORTANT
WARRANTY**

All communication equipment manufactured by Technisonic Industries Limited is warranted to be free of defects in Material or Workmanship under normal use for a period of one year from Date of Purchase by the end user.

Warranty will only apply to equipment installed by a factory approved and/or authorized facility in accordance with Technisonic published installation instructions. Equipment falling under the following is not covered by warranty:

- equipment that has been repaired or altered in any way as to affect performance,
- equipment that has been subject to improper installation,
- equipment that has been used for purposes other than intended,
- equipment that has been involved in any accident, fire, flood, immersion or subject to any other abuse.

Expressly excluded from this warranty are changes or charges relating to the removal and re-installation of equipment from the aircraft. Technisonic will repair or replace (at Technisonic's discretion) any defective transceiver (or part thereof) found to be faulty during the Warranty Period.

Faulty equipment must be returned to Technisonic (or its authorized Warranty Depot) with transportation charges prepaid. Repaired (or replacement) equipment will be returned to the customer with collect freight charges. If the failure of a transceiver occurs within the first 30 days of service, Technisonic will return the repaired or replacement equipment prepaid.

Technisonic reserves the right to make changes in design, or additions to, or improvements in its products without obligation to install such additions and improvements in equipment previously manufactured. This Warranty is in lieu of any and all other warranties expressed or implied, including any warranty of merchantability or fitness, and of all other obligations or liabilities on the part of Technisonic.

This Warranty shall not be transferable or assignable to any other persons, firms or corporations.

**For warranty registration please complete the on-line
Warranty Registration Form found at www.til.ca.**

